MMDS0508OM/D





For More Information On This Product, Go to: www.freescale.com

MMDS0508

Motorola Modular Development System Operations Manual

MMDS0508OM/D

Motorola reserves the right to make changes without further notice to any products herein to improve reliability, function, or design. Motorola does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, employees, subsidiaries, affiliates, and distributors harmless against all claims, costs, damages, and expenses, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part.

Motorola and the Motorola logo are registered trademarks of Motorola Inc.

Motorola Inc. is an Equal Opportunity/Affirmative Action Employer

MS-DOS is a registered trademark of Microsoft Corporation. IBM is a registered trademark of IBM Corporation.

MMEVS05 software is © P & E Microcomputer Systems, Inc.*, 1995; All Rights Reserved. Portions of the software are © Borland International, 1987. Portions of the software are © TurboPower Software, 1988.

 ^{*} P & E Microcomputer Systems, Inc.
 P.O. Box 2044
 Woburn, MA 01888-2044
 (617) 353-9206

Revision History

This table summarizes differences between this revision and the previous revision of this emulation module user's manual.

Previous Revision	None
Current Revision	Original release
Date	08/96

MMDS0508OM/D

Revision History

Table of Contents

General Description	Contents11Introduction11About this Manual12System Features13System Components15Host Computer Requirements16Acronyms17
Installation	Contents
	Introduction
	Configuring the Platform Board
	Installing the EM
	Removing the EM 25
	Making System Connections. .26 Host Computer Connection .26 Bus State Analyzer Connection .26 Target Cable Connection .27 Power Connection .27
	Reset Switch
	Serial Connector and Cable Information
	Power Supply Fuse Replacement

Table of Contents

Loading and Initialization	Contents.35Software Distribution Format36Installing MMDS Software.36Personality Files.37Using MMDS Software.37Running MMDS05.38Running MMDS08.39MMDS Communication.40
User Screens	Contents.41Introduction.42Main Window Screens42Status Area.45CPU Window.47Source/Code F2 Window.47Code F2 Window.47Source Window.48Variables F8 Window.49Memory F3 Window.50Debug F10 Window.50Pop-Up Windows.51Stack Window.52Set Memory Window.53Baud Window.54Emulator Clock Frequency Window.55Mouse Operation.56Changing Screen Colors.58
Operation Fundamentals	Contents.59Introduction.60System Initialization.60Setting Communications Baud Rate.61Standard Memory Mapping.61

	Custom Memory Mapping62
	Initializing the Clock Speed63
	Loading User Software63
	Initializing Memory63
	Initializing Assembly Language64
	Initializing Memory Data65
	System Commands
	Script Commands
	Information Commands67
	Log File Commands68
	Debug Screen Control
	Exit the Environment
	Debug Commands
	Setting CPU Registers71
	Memory Display71
	Reset Control of the Emulation System
	Using Breakpoints
	Tracing Instructions
	Execution Instructions
	Bus State Analyzer Commands74
	Configuring the Analyzer74
	Capturing Analyzer Data74
	Viewing Analyzer Data74
Bus State Analysis	Contents
5	Introduction
	Operating the Rus Analyzer 79
	Defining Events (Terms) 79
	Selecting the Trigger Mode
	Selecting Options
	Collecting Bus Data
	Viewing Data
	Searching the Trace Buffer
	Using the Time-Tag Clock

Table of Contents

Command-Line Commands	Contents.99Introduction.102Command Syntax.102Command Explanations.103
S-Record Information	Contents199Introduction199S-Record Content200S-Record Types201S-Record Creation202S-Record Example202
Index	Index

MMDS0508OM/D

General Description

Contents

Introduction
About this Manual
System Features
System Components
Host Computer Requirements
Acronyms

Introduction

The M68MMDS05/08 Motorola Modular Development System (MMDS) is a tool for developing embedded systems based on an MC68HC05 or MC68HC08 microcontroller unit (MCU). The MMDS is a modular emulation system that, when connected to a user's target system, gives the user interactive control of a microcontroller application.

The RAPID software provides an integrated development environment and includes an editor, assembler, and a user interface to the MMDS system. The environment allows for source-level debugging and simplifies writing and debugging code for an embedded MCU system. These features significantly reduce development time.

A complete MMDS system contains the station module (M68MMDS0508), an emulation module (EM), and a target cable assembly. An EM completes MMDS functionality for a particular MCU or MCU family. To accommodate emulation of the numerous MCUs available, the MMDS uses a variety of different EMs. Refer to Motorola's

General Description

Development Tool Selector Guide, order number SG173/D, for a complete list of available emulator modules and the appropriate user's manual for EM installation instructions. For connection to a target system, a separately purchased target cable with the appropriate target head also is needed.

To use the MMDS, an IBM (or compatible) host computer is needed. A 9-pin RS-232 serial cable also is provided with the MMDS.

About this Manual

This manual covers MMDS software, hardware, and reference information as follows:

- Installation on page 19 explains M68MMDS0508 hardware.
- Loading and Initialization on page 35 explains how to load and initialize the MMDS system software.
- User Screens on page 41 explains the window screens, as well as how to use a mouse.
- **Operation Fundamentals** on page 59 describes command usages.
- **Bus State Analysis** on page 77 details the built-in state analyzer features.
- Command-Line Commands on page 99 explains MMDS command syntax.
- **S-Record Information** on page 199 gives reference information about Motorola S-records.

Semiconductor, Inc

eescale

System Features

The MMDS is a full-featured development system that provides in-circuit emulation. Its features include:

- Real-time, non-intrusive, in-circuit emulation
- Real-time bus state analysis
- MC68HC11K1 system controller for fast command transfer
- Meets ECC92 European electromagnetic compatibility standards
- Four complex data breakpoints; a data breakpoint can be qualified by an address, an address range, data, or externally connected logic clips.
- 32 variables or real-time variables, plus a 32-byte block of real-time memory, mappable anywhere within a 1 Kbyte window over the 64-K HC05/HC08 memory map.
- 64 Kbytes of emulation memory to accommodate the largest available ROM size of current HC05/HC08 MCUs.
- 64 hardware instruction breakpoints over the 64-K memory map
- A DOS personality file for each EM. Each personality file provides a memory-map definition.
- 64K bytes of emulation memory, to accommodate the largest available ROM size of current HC05/HC8 MCUs.
- Latch-up resistant design (47-Ω series resistor on I/O connections to the target system) to make power-up sequencing unimportant.
- Built-in bus state analyzer:
 - 8K x 64 real-time trace buffer
 - Four hardware triggers for controlling real-time bus analysis and to provide breakpoints
 - Nine triggering modes
 - Display of real-time trace data as raw data, disassembled instructions, raw data and disassembled instructions, or assembly-language source code
 - As many as 8190 pre- or post-trigger points

General Description

- Trace buffer can be filled while single-stepping through user software
- 16-bit time tag, or an optional 24-bit time tag that sacrifices eight logic clips
- Eight software selections for the time tag clock source, permitting wide time variance between analyzer events
- 16 general-purpose logic clips, five of which can be used to trigger the bus state analyzer sequencer
- Four software-selectable internally generated oscillator clock
 sources
- Built-in power supply with 85 to 264 VAC input
- Command and response logging to disk files
- SCRIPT command for automatic execution of a sequence of MMDS commands
- Assembly-language source-level debugging
- RS-232 operation speeds as high as 57600 baud
- On-screen, context-sensitive help via pop-up menus and windows
- CHIPINFO command for memory-map, vectors, register, and pin-out information pertaining to the device being emulated
- Emulation that allows multiple types of reset:
 - RESET command resets target
 - RESETGO command resets target and begins execution
 - WAIT4RESET command resets target via target hardware assertion of the RESET signal
- Mouse or keyboard control of host software
- Status line that displays such information as emulator state, communications port, and communications rate
- Compact size: 15.38 inches (390.6 mm) deep, 10.19 inches (258.83 mm) wide, and 2.75 inches (69.85 mm) high. The station module weighs 6.0 pounds (2.72 kg).

Connections, configuration, and other related information is explained in the installation section of this document. For similar information with regard to EMs, see the corresponding EM user's manual.

System Components

The following items are included with the MMDS:

- **Station module:** the MMDS enclosure, containing the platform board and the internal power supply. The sliding panel in the enclosure top lets you insert an EM easily.
- 9-pin RS-232 serial cable: The cable that connects the station module to the host computer RS-232 port.
- **Serial adapter:** DB9M to DB25F RS-232 adapter for connecting to a 25-pin serial port on a host system.
- **System software:** RAPID integrated development environment featuring editor, assembler, and assembly source level debugger (3.5-inch diskettes)
- **RAPID documentation:** A *RAPID Integrated Development Environment User's Manual*
- **MMDS documentation**: An *MMDS0508 Operations Manual* (MMDS0508OM/D this manual).
- **Software Release Guide:** Documentation on the current release of system software.
- Two logic clip cable assemblies: twisted-pair cables that connect the station module to your target system, a test fixture, a clock, an oscillator, or any other circuitry useful for evaluation or analysis. One end of each cable assembly has a molded connector, which fits into pod A or pod B of the station module. Leads at the other end of each cable terminate in female probe tips. Ball clips come with the cables.

General Description

Separately purchased Motorola personality products include:

- An emulation module (EM): One of many printed circuit boards that complete MMDS functionality for one or more particular MCUs. The two DIN connectors on the bottom of the EM fit into connectors on the top of the MMDS0508 platform board for power and signal connections. The EM also has a connector for the target cable. EMs are purchased separately from the platform board and are shipped with a user's manual containing information specific to the module.
- **Optional target cable:** A separately purchased target cable that is part of a cable assembly, used to connect the target system to the MMDS system
- **Optional target head adapter:** A separately purchased target head adapter that is part of a cable assembly, used to connect the target system to the MMDS system

User supplied components include:

 Host computer: For further information refer to Host Computer Requirements

Host Computer Requirements

The host computer for the MMDS must be hardware and software compatible with IBM AT or PS/2 computers. The host computer must run DOS 5.0 or later versions. The host software requires approximately 512 Kbytes.

An asynchronous communications port, configured as COM1, COM2, COM3, or COM4, is required for communications between the MMDS and the host computer.

For improved product performance, additional system enhancements can be added. These are: 80386- or 80486-based systems, a hard disk drive, and a high-resolution color monitor with either an EGA or VGA graphics adapter card. The MMDS system software also supports a Microsoft, Logitech, or IBM mouse. Other mice may be compatible, but Motorola does not guarantee their satisfactory performance with MMDS software.

Acronyms

 Table 1 provides definitions for the acronyms used throughout this manual.

Term	Description
M68MMDS0508	The station module where common hardware for all M68HC05 and M68HC08 emulation resides.
EM	An emulation module that connects to the platform board to customize the MMDS for a particular MCU or family of MCUs.
RAPID	An integrated development environment that includes an editor and allows applications such as assemblers and debuggers to be blended into a single environment.
MMDS	Motorola Modular Evaluation System. A generic term that describes a two-board evaluation system consisting of the platform board, one of many emulation modules, and system software (RAPID integrated development environment, CASM assembler and MMDS debugger).
CASM	Cross assembler that assembles M68HC05 (CASM05) or M68HC08 (CASM08) code.

Table 1. Acronym Definitions

General Description

MMDS0508OM/D

Installation

Contents

Installation

Introduction

Complete MMDS installation consists of configuring the platform board, configuring and installing the appropriate emulation module (EM), and making system cable connections. Consult the system components section on page 9 for a list of all the system parts, including a separately purchased EM. Note that EM configuration is specific to a particular EM; follow the guidance of the specific EM user's manual. Follow the guidance given in this section to complete the MMDS installation.

Figure 1 shows the right side of the MMDS station module, with the access panel open. The recessed reset switch and power LED are on the front of the station module. The logic cable A and B connectors (pod A and pod B) are on the right (as you face the station module). When using the logic clip cables, always attach the black clip to ground.

Figure 2 shows the left side of the station module, with the access panel closed. The power cord socket, the power switch, and the 9-pin RS-232 serial connector are on the left as you face the station module. The circular +5 V out connector, also on the left side of the station module, is reserved for future features. A spacer covers the final enclosure cutout, for a future conenctor.)

NOTE: This manual uses the words left and right as you face the front of the station module.

Follow the guidance of this chapter to complete the installation of your MMDS.

MMDS0508OM/D



Figure 1. M68MMDS0508 Station Module (Right Side)





Figure 2. M68MMDS0508 Station Module (Left Side)

Configuring the Platform Board

The MMDS platform board has four jumper headers, all located near the front of the platform board. Jumper header J1 is for factory test. Depending on the design of each emulation module, jumper headers J2, J3, and J4 may control the voltage levels for ports A through D.

NOTE: The factory configures the platform board correctly for virtually all users before shipping the MMDS. These platform board jumpers should not be reconfigured unless instructed to do so by an emulation module (EM) user's manual.

MMDS0508OM/D

MOTOROLA

Semiconductor, Inc.

reescale

Factory TestThis diagram shows the factory configuration of jumper header J1. The
fabricated jumper between pins 1 and 2 is correct for MMDS operation.



The alternate jumper position has significance only for factory personnel.

Installation

Port Voltage Control Headers (J2–J4) Jumper headers J2 through J4, located near the right front corner of the platform board, set the voltage levels for ports A through D. The following diagram shows the factory configuration. The fabricated jumpers between pins 1 and 2 of these headers set the +5-volt level for all ports. This is the correct configuration for MMDS operation, unless the EM user's manual says that the EM is a low-voltage board.



If the EM can operate at low voltage, any of the ports can be operated at the low-voltage level. To do so, reposition the fabricated jumper of the corresponding header to pins 2 and 3. Jumper header J2 controls the voltage level of port A, jumper header J3 controls the voltage level of port B, and jumper header J4 controls the voltage level of port C or D, whichever pertains to the EM.

Freescale Semiconductor, Inc.

MMDS0508OM/D

Installing the EM

Perform these steps to install an EM in an MMDS enclosure:

- Ensure that station module power is off.
- Remove the panel from the station module top by first turning each of the two 1/4-turn speed fasteners to the released position.
- Install the EM on the platform board: Carefully fit the female 96-pin connectors (located on the bottom of the EM) onto the corresponding male DIN connectors on the top of the platform board. Snap the EM onto the plastic standoffs and make sure that the DIN connectors are joined together firmly.
- Connect the target cable, if appropriate.
- Reaffix the panel to the station module top.
- **NOTE:** Many EM boards may have 64-pin female DIN connectors. If so, these will mate with the male DIN connectors on the platform board. The keyed plastic on the connector will ensure proper alignment.

Removing the EM

Complete these steps to remove an EM from an MMDS enclosure:

- Ensure station module power is off.
- Remove the panel from the station module top by first turning each of the two 1/4-turn speed fasteners to the released position
- Disconnect the target cable from the EM target connector.
- Unsnap all nylon spacers from the edges of the EM. Then carefully lift the EM straight up, separating it from the platform board.
- Reaffix the panel to the station module top.

Making System Connections

	The specific application determines the number of MMDS connections required. At the very least, the platform board and EM must be connected to the host computer and to a power supply. Cable connections are explained in the sections that follow.	
Host Computer Connection	Use the 9-pin serial cable to connect a host computer's 9-pin serial port to the MMDS 9-pin serial cable connector. Note which computer serial port is used. If the COM1 port (the default) is not used, the port number must be specified in the MMDS software start-up command.	
	If the serial port is a 25-pin connector, use the provided 9- to 25-pin adapter between the host serial port and the cable.	
	If the development system is operated in the RAPID environment, RAPID must be configured to communicate through the proper serial port.	
Bus State Analyzer Connection	If your work session includes bus state analysis, you may need the logic clip cable assemblies. The two logic clip connectors, referred to as pods A and B, allow external events to be captured in the analyzer. External clock signals for the emulator and for the analyzer also can be input through logic clip connections.	
	The pod A and pod B connectors are located on the right side of the station module. Pod A is nearest the station module power supply. These pod connections correspond to the cable A and cable B selections available in the bus state analyzer configuration window. Table 2 on page 31 gives pinout information for both logic clip connections.	
	If you need only one logic cable assembly, connect it to either pod A or pod B. Orient the cable connector so that its pin 1 connects to pin 1 of the pod. The keyed plastic ensures proper orientation. Connect the other end of the logic cable assembly to an external target point. Optionally,	

MMDS0508OM/D

Semiconductor, Inc.

Freescale

connect the probe tips to the ball clips that come with the cable assembly, then connect the ball clips to appropriate external test points.

NOTE: The white probe of pod A is the external clock input for the emulator and the white probe of pod B is the external clock input for the analyzer. Always connect the black (ground) probe tip to an appropriate ground point of the target system before making logic clip connections to target points.

If you need the second logic cable assembly, connect it in the same way to the remaining pod connector of the station module. Make target-system connections as for the first cable.

Target CableIf the MMDS will interface with a user's target system, the target systemConnectionshould be connected to the EM board through a target cable assembly.
A cable assembly consists of a target head and a target cable. The
target connector will be on the right side of the EM module. Connect one
end of the target cable to the EM target connector and the other end of
the target cable to the user's target system before power-up. See the
specific EM user's manual for specific information on the target head
adapter and the appropriate target cable.

Make sure that the target head adapter and target cable mate correctly. Consult the EM manual for proper connection. Connecting the target cable any other way can damage the system.

NOTE: When connecting a target cable, press only on the rigid plastic connectors at either end of the cable. Pressing on the flexible part of the cable can damage the cable.

Power Connection The final MMDS connection is line power. The MMDS power switch is the rocker switch on the left side of the station module. Set the power switch to OFF.

Insert the female end of the power cord into the power cord socket. Then plug the other end of the cord into a line-power outlet and set the power switch to ON. The green LED on the front of the station module lights to confirm system power.

Installation

This completes cable connections. Refer to **Loading and Initialization** on page 35 for information on communicating with the MMDS.

Make sure the power to the MMDS is turned off when installing the EM or removing the EM from the station module. Sudden power surges can damage MMDS circuits.

Reset Switch

RS-232 handshake signals control MMDS resets. A reset initializes the control board from its start-up point. If the host serial port does not implement handshaking, reset the MMDS manually. Press gently to trip the switch.

Serial Connector and Cable Information

This section contains pin identification and signal names for connectors common to all MMDS systems. For pinout information for a particular EM connector, refer to the corresponding EM user's manual.

Serial RS232This diagram shows pin numbering for the 9-pin female serial connectorConnectorof the platform board. Table 1 lists the signals transmitted on the 9-lead
serial connection.

$$5 1$$

$$00000$$

$$0000$$

$$9 6$$

Connector Pin	Mnemonic	Signal
1	DCD	DATA CARRIER DETECT — Output signal that indicates detection of an acceptable carrier signal
2	RX	RECEIVE DATA — Serial data output line
3	ТΧ	TRANSMIT DATA — Serial data input line
4	DTR	DATA TERMINAL READY — Input signal that indicates on-line/in-line/active status
5	GND	GROUND
6	DSR	DATA SET READY — Output signal that indicates on-line/in-line service/active status
7	RTS	REQUEST TO SEND — Input signal that requests permission to transfer data
8	CTS	CLEAR TO SEND — Output signal that indicates a ready-to-transfer data status

Table 1. Serial Connector and Cable Pin Assignments

Installation

Logic Cables and
ConnectorsThe diagram below shows the pin numbering for both pod A and pod B
logic cable connectors of the station module. Table 2 details the pinout
designations where an LCx assignment gives each logic clip connection
a name. The logic clips are used to capture data in the bus state
analyzer. (Pin 9 of both pods provides connection to an external ground.)
In addition, the pod connectors are used as external clock inputs for the
emulator clock and bus state analyzer timetag. The table also provides
color code information for each pod.

The external clock inputs are through pin 17 of each pod. Pod A pin 17 is the external clock input for the emulator. To use this source, make the desired clock connection to the white probe tip and use the OSC command to select an external source.

Pod B pin 17 is the external timetag input for the bus state analyzer. To use this source, make the desired clock connection to the white probe tip and use the TIMETAG command to select an external time tag source for the analyzer.



MMDS0508OM/D

MOTOROLA

30

Installation Serial Connector and Cable Information

Pod Pin	Pod A Signal	Pod B Signal	Probe Color
1	LC0	LC8	Brown (BRN)
2	GND	GND	
3	LC1	LC9	Red (RED)
4	GND	GND	
5	LC2	LC10	Orange (ORG)
6	GND	GND	
7	LC3	LC11	Yellow (YEL)
8	GND	GND	
9	LC4	LC12	Green (GRN)
10	GND	GND	
11	LC5	LC13	Blue (BLU)
12	GND	GND	
13	LC6	LC14	Purple (PUR)
14	GND	GND	
15	LC7	LC15	Gray (GRY)
16	GND	GND	
17	EXT_OSC	TT_OSC	White
18	GND	GND	
19	GND	GND	Black
20	GND	GND	

Table 2. Pod and Logic Cable Pin Assignments

Installation

Power Supply Fuse Replacement

The station module power switch/connector assembly contains a standard $1/4 \ge 1 / 4$ inch, 1.6-ampere, 250-volt ceramic, time-delay fuse. Figure 3 shows this assembly with its door open (for fuse replacement).



Figure 3. Power Switch/Connector Assembly

To replace the fuse, perform these steps:

- Press the power switch OFF and disconnect the power cord.
- Insert a small screwdriver at the tab on the right edge of the switch/connector assembly. (Figure 3 shows where to insert the screwdriver.) Gently pry open the assembly door, which swings open to the left.
- Remove the fuse holder from the switch/connector assembly. Remove the fuse from the holder.
- Insert the replacement fuse into the holder. Then re-install the holder in the switch/connector assembly. Make sure that the fuse holder arrow points down. Close the assembly door.
- Reconnect the power cord. This completes fuse replacement.

Installation

MMDS0508OM/D

Loading and Initialization

Contents

Software Distribution Format	6
Installing MMDS Software	6
Personality Files	7
Using MMDS Software	7 8 9
MMDS Communication	C

MMDS0508OM/D

Loading and Initialization For More Information On This Product, Go to: www.freescale.com

Software Distribution Format

MMDS software is distributed on 3.5-inch high-density diskettes. The install process places the RAPID environment files and the MMDS software files in the directory designated during the install process. **Table 3** describes the system files required to control the MMDS system, where *x* denotes a version number. Refer to the Software Release Guide for information on other files loaded.

File Name	Description
MMDS05.EXE	MMDS05 host software
MMDS05X.EXE	MMDS05 host software for running in a DOS window under Windows
MMDS05Vx.HLP	HELP command windows for the MMDS05 commands
MMDS08.EXE	MMDS08 host software
MMDS08X.EXE	MMDS08 host software for running in a DOS window under Windows
MMDS08Vx.HLP	HELP command windows for the MMDS08 commands

Table 3. MMDS Software Files

Installing MMDS Software

The install process will place MMDS and all supporting files on a hard drive. To install the MMDS files, insert the distribution diskettes into an active drive. Make the installation drive active by typing the drive letter followed by a colon (:) and press <CR>. Type INSTALL and press <CR>. Follow the directions as prompted by the install software.

Refer to the Software Release Guide for further information on the installation process.
Personality Files

Various designs of MCUs require different configurations of the MMDS system. The appropriate setup for each MCU is specified in a unique personality file.

NOTE: These files are shipped with separately purchased EMs.

Personality files are usually installed in the directory from which the MMDS software is executed. These personality files have a standard extension of.MEM. If a personality file is not located in the working directory, the software displays a search window used to find the correct file. To determine the personality files used by a particular EM module, refer to the appropriate EM user's manual.

More than one personality file can be installed; the MMDS operating software automatically loads the default personality file that corresponds to the currently connected EM module. As discussed in the following paragraph, other personality files can be loaded via the LOADMEM command or through use of the –M option.

Using MMDS Software

The correct executable file to run is dependent on which type EM is installed on the MMDS platform board. If an HC05 EM is installed, the MMDS05.EXE file should be run. If an HC08 EM is installed, the MMDS08.EXE file should be run.

The following paragraphs discuss the proper syntax for running the HC05 and HC08 software.

Alternatively, the MMDS can be called from within the RAPID environment. Running the MMDS05 or MMDS08 from RAPID may require running RINSTALL, RAPID's configuration set-up program, to set up the directory path, serial port, etc., as described in the RAPID user's manual.

NOTE: If you plan to use the MMDS software in a DOS window under Windows, use the MMDS05X.EXE or MMDS08X.EXE files.

Loading and Initialization

Running MMDS05 To call the debugger executable directly from the DOS prompt, type this command:

C:\MMDS05>MMDS05

Note these five options for the startup command:

- If the MMDS05 is connected to COM2, COM3, or COM4, add the corresponding integer to the command: C:\MMDS05>MMDS05 2
- 2. If the computer has a monochrome monitor, add BW to the command:

C:\MMDS05>MMDS05 BW

3. To specify a personality file to be loaded automatically (instead of the default), add the –M option, followed by the filename (Do not put a space between the M and the filename). If the specified personality file has a .MEM extension, the .MEM extension may be omitted from the filename:

C:\MMDS05>MMDS05 -M<filename>

4. To specify an S-record file (and any map file with the same name) to be loaded automatically, add the filename option. If the specified S-record file has a .S19 extension, the .S19 extension may be omitted from the filename:

C:\MMDS05>MMDS05 <filename>

- 5. To specify a default baud rate of 9600, add the –B option: C:\MMDS05>MMDS05 –B
- **NOTE:** Multiple options in the start-up command should be separated by a space.

Running MMDS08 To call the debugger executable directly from the DOS prompt, type this command:

C:\MMDS08>MMDS08

Note these five options for the startup command:

- If the MMDS08 is connected to COM2, COM3, or COM4, add the corresponding integer to the command: C:\MMDS08>MMDS08_2
- 2. If the computer has a monochrome monitor, add BW to the command:
 - C:\MMDS08>MMDS08 BW
- 3. To specify a personality file to be loaded automatically (instead of the default), add the –M option, followed by the filename. (Do not put a space between the M and the filename.) If the specified personality file has a .MEM extension, the .MEM extension may be omitted from the filename:

C:\MMDS08>MMDS08 -M<filename>

4. To specify an S-record file (and any map file with the same name) to be loaded automatically, add the filename option. If the specified S-record file has a .S19 extension, the .S19 extension may be omitted from the filename:

C:\MMDS08>MMDS08 <filename>

- 5. To specify a default baud rate of 9600, add the –B option: C:\MMDS08>MMDS08 –B
- **NOTE:** Multiple options in the start-up command should be separated by a space.

MMDS Communication

The host program establishes communications with the MMDS system and displays the appropriate debug screen as shown in the section on user screens. If the host program fails to establish communications, an error screen appears and the system operation is returned to DOS. The information in the error screen helps determine why the software does not run.

For best performance of the system, communications between the host and the station module should be at the maximum available baud rate. At power-up, the host software automatically sets the maximum baud for the system.

Reduce the baud rate if a communication error message appears. Refer to **Running MMDS05** and **Running MMDS08** on the preceding pages to set the start-up baud rate at 9600. If communication errors persist, turn off the disk cache (SMARTDRV.EXE) on the computer.

Enter commands in response to the MMDS command prompt (>). When the emulation and debugging session has been completed, terminate the session by entering the EXIT or QUIT command.

MMDS0508OM/D

MOTOROLA

User Screens

Contents

Introduction
Main Window Screens
Status Area
CPU Window
Source/Code F2 Window47
Code F2 Window
Source Window
Variables F8 Window49
Memory F3 Window
Debug F10 Window
Pop-Up Windows
Stack Window
Set Memory Window53
Baud Window
Emulator Clock Frequency Window
Other Windows
Mouse Operation
Changing Screen Colors

MMDS0508OM/D

User Screens

Introduction

The user interface screen to the MMDS development system consists of a status area, five static main windows and several pop-up windows. The screen displays the code, data and status information required for the user to control the emulation environment. This section provides a description of the screen functionality, including mouse operation. The screens associated with the bus state analyzer will be covered in the **Bus State Analysis** section.

Main Window Screens

Figure 4 and **Figure 5** show the debug screen for the MMDS05 and the MMDS08 versions of the software, respectively. The screen is identical for both versions of the software except for the CPU window. The screen consists of a status area and five static windows which display source or object code, variables, the command line and the contents of the CPU registers or memory.

To carry out actions associated with a window of the debug screen, select the window. To select a window, press the numbered function key included in the window title. For instance, press the F2 key to select the source/code F2 window, press the F8 key to select the variables F8 window, and so forth. To return to the debug command line, press F10. Note that several operations can also be mouse controlled. Refer to **Mouse Operation** on page 56 for detailed information on mouse usage. **Table 4** lists the key commands available in any of the main windows.

MMDS0508OM/D

MOTOROLA



MMDS0508OM/D

MOTOROLA

User Screens For More Information On This Product, Go to: www.freescale.com

Freescale Semiconductor, Inc.

User Screens Main Window Screens

Figure 4. MMDS05 Debug Screen

Main Window Screens

S1=DCHAR G/CHARGE mooz = F10:Debug S2=0 PTIONS gotil — step — info-• 52 45 20 4F ; c l BD 20 47 F9:rpt 41 MEMORY F3 53 53 53 48 SOURCE: init.asm 43 41 53 4E F1:Help F2:Code F3:Mem F4:BSA data F5:BSA setup F8:vars 44 48 20 4F 20 20 20 rslt+4 49 clrbgn #flag #\$40 tcr 31 25 24 54 0,x stop 53 64 50 50 0050 0058 0060 clra 0068 incx sta срx bne sta ldx lda F10 ģ DEBUG begin COM1:57600 targetpwr pc---pr Inst brkpt/Illegal Address -B>clrb logfile resetin Address \$30 %00110000 \$E7 %11100111 brkpt/Illegal 0 i S1=DCHAR 11.IN Xreg CCR н Н A+B+C+D VARIABLES F8 \$0000 delete -CPU Inst Hreg 00 00F3 SР 00A7 DISLINE1 CLKTIME CURVAL >g >idle 00A8 Armed RSLT >BR idle Acc E С Д ۸

Figure 5. MMDS08 Debug Screen

MMDS0508OM/D

Semiconductor, Inc.

Freescale

MOTOROLA

Кеу	Description
F1	Activate the HELP pop-up window
F2	Activate the Code F2 window (if object code is displayed)
F3	Activate the Memory F3 window
F4	View the bus state analyzer data screen
F5	View the bus state analyzer setup screen
F8	Activate the Variables F8 window
F9	Repeat the preceding command
F10 or <esc></esc>	Returns to debug F10 window
\downarrow	Scrolls the window down one line, same as clicking on the \downarrow symbol at window edge
1	Scrolls the window up one line, same as clicking on the ↑ symbol at window edge
Page Down	Scrolls the window down one page
Page Up	Scrolls the window up one page
Alt-X	Terminates host session
Alt-S	Writes screen contents to log file
Home	Scrolls the window to the home line
	Delete a highlighted variable in the Variables F8 window

Table 4. Key Functionality of Debug Screen Windows

Status Area

The status area, located at the left center of the debug screen, displays several items of status information. **Table 5** explains the indicators that may appear in this area.

Indicator, Position	Status, Meaning
Bus analyzer state, left screen edge, below variables F8 window	Armed — bus analyzer is armed and waiting for a trigger Disarmed — bus analyzer is disarmed
Bus analyzer sequence mode, below variables F8 window	Continuous all — continuous trace, all cycles Continuous events — continuous trace, events only Counted all — counted trace, all cycles Counted events — counted trace, events only A+B+C+D — trigger on event A, B, C, or D A+B>C+D — trigger on event A or B, then C or D A>B>C!D — trigger on events A, B, and C, in order, unless event D occurs A>B>C>D — trigger on events A, B, C, and D, in order Nth A+B+C+D — trigger on Nth event A, B, C, or D
MCU state, left screen edge above debug F10 window	Idle, Running, Stopped, Wait, or In Reset followed by the reason for a status change
RESETIN signal state, below source/code F2 window	Resetting — Target system can reset emulating MCU (blank) — Target system cannot reset emulating MCU
RESETOUT signal state, between variables F8 and memory F3 windows	 Resetout — RESET command resets emulating MCU and the target system (blank) — RESET command resets only the emulating MCU
Logging state , between variables F8 and memory F3 windows	Logfile — Logging in progress (blank) — Logging not in progress
Target system power, between variables F8 and memory F3 windows	Target pwr — Target system power is on (blank) — Target system power is not detected
Communications port and rate, above debug F10 window	COMX:BBBBB — The host software is communicating with the MMDS through port X, at BBBBB baud
Special status message, to the right of the MCU state status area, above debug F10 window	 Inst brkpt/Illegal Address — A breakpoint or illegal address has been encountered and execution has halted Write protect — An attempt was made to write to memory designated as ROM or is unused memory space. Program counter will be at the next instruction that would have been executed had the error not occurred.

Table 5. Status Area Indicators

Semiconductor, Inc.

Freescale

- CPU Window The CPU window is located at the upper left of the debug screen. This window displays the contents of the accumulator (A register), the index register (X register), the program counter (PC), the stack pointer (SP), and the condition code register (CCR). When a new value for any of these registers is entered, the new value appears in the window.
 - **NOTE:** For MMDS08 users an additional register, the H register (upper byte of the index register), is shown as well as the V bit in the CCR.

The CCR bit designators are located at the lower right of the CPU window. The CCR pattern is V11HINZC (V is two's complement overflow for M68HC08 MCU only and is 1 for M68HC05 MCU, H is half-carry, I is interrupt mask, N is negative, Z is zero, and C is carry). A letter in these designators means that the corresponding bit of the CCR is set; a period means that the corresponding bit is clear.

Note that this window cannot be selected and cannot be used to change values. Instead, this window shows changes made via other windows or changes that occur due to running code.

Source/Code F2 The window located in the upper right corner of the screen has two Window operating modes. The functionality of the window is different for each of the operating modes. Under certain conditions explained below, you may toggle between the operating modes. One mode (Code F2) displays the object code from a .S19 file loaded into the MMDS system. The other mode (Source) displays the source code from a .MAP file loaded into the MMDS system at the same time as the object code. More detail and a description of the differences in the operating modes are discussed below.

Code F2 Window On entering MMDS software, the window defaults to object code, the window title is CODE F2, and window contents are a disassembled representation of MCU memory. In this object code display, the disassembled instructions change when corresponding bytes of memory change. To scroll through this window, press the F2 key (to select the window), then use the arrow keys, since the mouse does not function with this window.

User Screens

Source Window When a .MAP file exists in the same directory as the .S19 file, the MMDS software loads both files at the same time and the source code generated from the .MAP file is available for use in the debug process. The contents of this window change to source code (and the title changes to SOURCE:filename.asm) if:

- 1. A .MAP file has been loaded and
- 2. The program counter (PC) points to a memory area covered by the .MAP file.

Once a .MAP file has been loaded and the PC points to an area of user code, the SOURCE command can be used to toggle between source code and object code. If a mouse is installed, the symbols that appear at the bottom of the source window can be selected. Use the mouse or arrow keys to scroll through the information in the window.

There are several Alt-commands associated with the source window. The list of Alt-commands appears at the bottom of the debug screen when the <Alt> key is pushed. **Table 6** lists the key commands available in this window when a source code is displayed.

NOTE: The F2 function key does not activate this window in the source code operating mode. The Source window and the Debug F10 window will both be active at the same time. Use the mouse or arrow keys to select/scroll the information in the Source window.

MMDS0508OM/D

MOTOROLA

Name	Key	Description
Breakpoint	Alt-B	Sets or removes a breakpoint at highlighted line
Exit	Alt-X	Terminates debug session
Find	Alt-F	Finds the first occurrence of the specified string in the source file
Find Next	Alt-L	Finds the next occurrence of the specified string in the source file
GoTil	Alt-G	Executes code from the current PC address to the highlighted line
List Modules	Alt-M	Lists available source code modules
PC	Alt-P	Sets the program counter (PC) to the address on the highlighted line
Zoom	Alt-Z	Toggles the size of the source window between normal and enlarged

Table 6. Source Window Key Commands

Variables F8 Window

The variables F8 window, located at the left side of the debug screen, is initially blank. The window shows as many as 11 variables, specified via the RTVAR or VAR command. Press the F8 function key to select this window so that the arrow keys can highlight existing variables. If more than 11 variables have been declared, use the arrow keys and the page up/down keys to display all variables. To delete a previously set variable, highlight the variable and press the delete key.

NOTE: The delete operation can be performed via the mouse by selecting the variable and clicking on the word DELETE at the bottom of the window.

It is possible to specify as many as 32 variables via the VAR and RTVAR commands. The variables appear with their current values in hexadecimal, binary, decimal, or ASCII format. Refer to the section entitled **Command-Line Commands** for more information about the RTVAR and VAR commands.

User	Scre	ens

Memory F3 Window	The memory F3 window, located at the right side of the debug screen, displays the contents of 32 memory locations. The value stored at a specific location is displayed in both hexadecimal and ASCII format. In the ASCII area to the right in the window, control and other non-printing characters appear as periods (.). As the contents of these locations are modified, the new values appear in this window. Use the scroll bar to the right of the window to display other areas of memory.
	To select this window, press the F3 function key. The scroll bar disappears; use the arrow keys and the page up/down keys to display lower or higher address ranges.
	If real-time memory has been declared, the 32-byte block beginning at the declared location will be displayed while code is executing.
	If real-time memory has not been declared, dashes replace the values when code is executing. Updated values reappear when execution stops.
	Refer to the section entitled Command-Line Commands for more information about the RTMEM command.
Debug F10 Window	The debug F10 window, located at the bottom of the debug screen, is the default active window. This window contains the command line, identified by the command prompt (>). Enter (type) a command at the prompt. To process the command, press <cr> (that is, press the ENTER, RETURN, or carriage-return key). The software displays any additional prompts, messages, or data that pertain to the command. If the command is not entered correctly or is not valid, the software displays an appropriate error message. Refer to the section entitled Command-Line Commandsf or a list and explanation of the of the available commands.</cr>
	After command execution, the software again displays the command prompt. As a new line appears in the debug F10 window, preceding lines scroll upward. The window displays as many as four lines. When any other window is selected, the cursor disappears from the debug F10

MMDS0508OM/D

window. To return to the debug F10 window, press the F10 function key.

The MMDS maintains a command buffer of commands entered on the command line. The mouse can be used to select the \downarrow and \uparrow arrow symbols to sequence forwards or backwards through the command buffer. Press the <CR> key to then repeat the command. To repeat the last command executed at any time, press the F9 key.

Pop-Up Windows

In addition to the five main windows, several temporary pop-up windows such as the bus state analyzer windows, the stack window, the set memory window, the baud window, and the emulator clock frequency window may appear during MMDS operation. **Table 7** lists the key commands for these subordinate windows.

Table 7	. Window	Key Commands
---------	----------	--------------

Кеу	Description
\downarrow	Moves cursor down one line
\uparrow	Moves cursor up one line
<i>~</i>	Moves cursor left
\rightarrow	Moves cursor right
Home	Moves cursor to top line of window
End	Moves cursor to bottom line of window
Page Down	Scrolls down one page (HELP only)
Page Up	Scrolls up one page (HELP only)
F6	Saves memory map to file (SETMEM only) and applies memory map to the MMDS
F7	Applies memory map to emulator and returns to debug screen (SETMEM only)
<cr></cr>	Applies selection to emulator and returns to debug screen, except SETMEM For HELP, displays window for selected item For COLORS, accepts the existing color selection For STACK, returns to the debug screen
<esc></esc>	Returns to debug screen without applying selection to emulator For COLORS, returns to the debug screen without accepting any more colors For STACK, returns to the debug screen

MMDS0508OM/D

User Screens

For More Information On This Product, Go to: www.freescale.com

User Screens

- Stack WindowThe temporary stack window appears near the center of the debug
screen when the STACK command is entered. As Figure 6 shows, this
window displays the contents of the SP register at the top of the window.
The 12 bytes at the top of the stack are displayed to the left. The
interpretation of the stack shown to right in the window is valid only if the
last push to the stack was caused by an interrupt. Press the <ESC> key
to remove the stack window and return to the debug window.
 - **NOTE:** The interrupt stack data to the right side of the window is an interpretation of the top five bytes on the stack. If the last push to the stack was due to a BSR or JSR instruction, five bytes were not pushed to the stack and the interrupt stack information is invalid.

		CTAC	2		
d 1 -			~	0.070	
Sta	CK F	ointe	er	= 00F.8	
Raw Byte	es:	INCE	r	rupt Stack:	
• • • •	•			HINZC	
• • • •	•	CCR	>	11100101	
• • • •	•	Α	>	FF	
• • • •	•	х	>	10	
00FF	7D	ret	>	0244	
00FE	01			-	
00FD	44				
00FC	02				
00FB	10				
00FA	ਸ ਸ				
00FA 00F9	5				
CD> 00F9	07				
SF> 00F0	07				

Figure 6. Stack Window

MMDS0508OM/D

MOTOROLA

Set Memory The temporary set memory window (Figure 7) appears near the center of the debug screen. Enter the set memory (SETMEM) command to customize the memory map. The SETMEM command allows mapping over memory defined as RAM, ROM, or undefined. However, mapping over internal resources such as option RAM, I/O, or EEPROM is not allowed.

RAM0008000FFRAM1XXXXXXXXRAM2XXXXXXXXRAM3XXXXXXXXROM00020004FROM1010008FFROM21FF01FFFROM3XXXXXXXXVector1FFEF6:SAVEF7:EXECUTE <esc>:CANCEL</esc>	<i>C</i> 11	stom N	an
RAMO 0080 00FF RAM1 XXXX XXXX RAM2 XXXX XXXX RAM3 XXXX XXXX ROM0 0020 004F ROM1 0100 08FF ROM2 1FF0 1FFF ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	cu		lap
RAM1 XXXX XXXX RAM2 XXXX XXXX RAM3 XXXX XXXX ROM0 0020 004F ROM1 0100 08FF ROM2 1FF0 1FFF ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	RAM0	0080	00FF
RAM2 XXXX XXXX RAM3 XXXX XXXX ROM0 0020 004F ROM1 0100 08FF ROM2 1FF0 1FFF ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	RAM1	XXXX	XXXX
RAM3 XXXX XXXX ROM0 0020 004F ROM1 0100 08FF ROM2 1FF0 1FFF ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	RAM2	XXXX	XXXX
ROM0 0020 004F ROM1 0100 08FF ROM2 1FF0 1FFF ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	RAM3	XXXX	XXXX
ROM0 0020 004F ROM1 0100 08FF ROM2 1FF0 1FFF ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>			
ROM1 0100 08FF ROM2 1FF0 1FFF ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	ROM0	0020	004F
ROM2 1FF0 1FFF ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	ROM1	0100	08FF
ROM3 XXXX XXXX Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	ROM2	1FF0	1FFF
Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	ROM3	XXXX	XXXX
Vector 1FFE F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>			
F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>	Vect	or	1FFE
F6:SAVE F7:EXECUTE <esc>:CANCEL</esc>			
F7:EXECUTE <esc>:CANCEL</esc>	I	76:SAV	E
<esc>:CANCEL</esc>	I	7 : EXE	CUTE
	<esc< td=""><td>C>:CAN</td><td>CEL</td></esc<>	C>:CAN	CEL

Figure 7. Set Memory Window

MMDS0508OM/D

User Screens

User Screens

Baud Window The temporary baud window (Figure 8) appears near the center of the debug screen when the baud (BAUD) command is entered. The BAUD command sets the baud rate for communications between the system controller and the host computer. This window shows the available baud rates.

—BAUD—	I
2400	
4800	
9600	
19200	
38400	
57600	

Figure 8. Baud Window

Emulator ClockDepending on the EM board used, the MMDS platform board can supply
the oscillator clock for the MCU's OSC1 input. This clock source can be
an internally generated source or an external source input through the
white logic clip of pod A. Note that the EM being used will require a
specific jumper configuration in order to use the platform board clock
source. Refer to the EM user's manual for the availability of this feature.

For the MMDS05, five clock frequencies are available. The four internally generated clock frequencies are: 8 MHz, 4 MHz, 2 MHz, and 1 MHz, and an external clock source. Entering emulator clock (OSC) command without the designated frequency brings up the temporary MMDS emulator clock frequency window near the center of the debug screen. Use the up/down arrow keys to select the emulator MCU's clock frequency and press <CR> to complete the selection. The default emulator clock rate is 2 MHz as shown in Figure 9.



Figure 9. MMDS05 Emulator Clock Frequency Window

For the MMDS08, six clock frequencies are available. The five internally generated clock frequencies are available: 16 MHz, 8 MHz, 4 MHz, 2 MHz, and 1 MHz and an external clock source. The default emulator clock rate is 4 MHz as shown in Figure 10.

Before changnig the clock rate, make sure that the emulation MCU supports the desired frequency and the appropriate jumpers are set correctly.



Figure 10. MMDS08 Emulator Clock Frequency Window

Other Windows

In addition to the screen windows described in this section, several other transient dialog windows will be encountered. Those windows encountered while using the bus state analyzer will be discussed in the **Bus State Analysis** section. Many are for file search selections in which the directory paths can be scanned for a desired file. Other windows will appear when using help commands. To select an item from a menu or file list, move the highlight cursor using the \uparrow and \downarrow keys to the desired item and press <CR>. To close a window without selecting an item, press the <ESC> key.

Mouse Operation

MMDS software supports a Microsoft, Logitech, or IBM mouse. Install the mouse according to the manufacturer's instructions, using the accompanying mouse driver software. Mice made by other manufacturers may be compatible, but Motorola does not guarantee their performance with the MMDS system.

Some MMDS operations can be accomplished by using an installed mouse to select a desired function. Note that the select symbols are only visible if a mouse is installed.

The mouse can be used to scroll through the source window, variables F8, memory F3, the bus state analyzer data F4, and debug F10 windows.

"Clicking on" an item means positioning the mouse cursor on the item, then quickly pressing and releasing the left mouse button. The mouse operations are:

- General
 - − Scroll through a window Click on the \uparrow and \downarrow symbols to right edge of the selected window.
- Variable F8 Window
 - Highlight items in the source and variables F8 windows Move mouse over desired item and click.
 - Delete the highlighted variable in the variables F8 window —
 Click on the word DELETE at the bottom of the window.
 - Pressing the right button of the mouse to duplicate the functionality of the <ESC> key.

Semiconductor, Inc

eescale

- Source Window
 - Set the PC to the address of the instruction on a highlighted line — Click on PC at the bottom of the source window.
 - Set or clear a breakpoint at the highlighted instruction in the source window — Click on BR at the bottom of the source window.
 - Begin executing instructions starting at the PC address Click on GO at the bottom of the source window.
 - Stop executing instructions Click on STOP at the bottom of the source window.
 - Execute instructions beginning with the instruction at the address in the PC and stopping at the highlighted instruction in the source F2 window — Click on GOTIL at the bottom of the source window.
 - Execute the instruction at the address in the PC Click on STEP at the bottom of the source window.
 - Display the source file line number of the highlighted line of the source F2 window, along with its address, disassembled contents, and the name of the file — Click on INFO at the bottom of the source window.
 - Toggle the size of the source window between normal and enlarged — click on ZOOM at the bottom of the source window.

Changing Screen Colors

To change screen colors, enter the COLORS command from the debug screen; the colors window appears. This window includes a list of screen elements and a matrix of foreground/background color combinations. Each color combination has a 2-digit hexadecimal number.

A prompt asks for the color of the first screen element. To accept the current color, press <CR>. To change the color, enter the number of the choice, then press <CR>. A new prompt asks for the color of the next element. Select the color for each element in the same way. The command ends when a color has been selected for the last screen element or when ESC is pressed.

In the color matrix, rows correspond to background colors and columns correspond to foreground colors. This means that color choices from the same row result in differently colored letters and numbers against the same background color. Making the background of highlights and help screens a different color sets these elements off from the main screen.

The software stores color selections in file COLORS.05 or COLORS.08. When MMDS is executed again, the software applies the newly selected colors. Use the color selection file with another system to retain the selected colors.

NOTE: Delete the COLORS file from the MMDS subdirectory to return to the default colors.

Freescale Semiconductor, Inc

Operation Fundamentals

Contents

Introduction
System Initialization60Setting Communications Baud Rate61Standard Memory Mapping61Custom Memory Mapping62Initializing the Clock Speed63Loading User Software63Initializing Memory63Initializing Memory63Initializing Memory63Initializing Memory63Initializing Memory63Initializing Memory Data65
System Commands66Script Commands66Information Commands67Log File Commands68Debug Screen Control69Exit the Environment70
Debug Commands.71Setting CPU Registers71Memory Display71Reset Control of the Emulation System72Using Breakpoints72Tracing Instructions73Execution Instructions73
Bus State Analyzer Commands. .74 Configuring the Analyzer .74 Capturing Analyzer Data .74 Viewing Analyzer Data .74

Introduction

An emulation system gives the user the tools needed to develop an embedded MCU application in the most efficient way possible.

This section describes the basic operation of the MMDS. Detail of specific commands is available in **Command-Line Commands**.

Operation of the MMDS may be divided into four main areas:

- System Initialization
- System Information
- Debug Operation
- Bus State Analyzer Operation

A start-up script file, described in **Script Commands** on page 66, can be set up to perform a set of commands automatically each time the MMDS software is run. This start-up file must have the name STARTUP.05 or STARTUP.08.

System Initialization

Initializing the MMDS system includes:

- Initializing the communications baud rate
- Setting the memory map
- Initializing the clock speed
- Loading user software and a symbol table
- Initializing memory

Each part of initialization and use of the appropriate commands is discussed here.

Setting Communications Baud Rate	For best system performance, communications between the host and the station module should be at the maximum available baud rate. At power-up, the MMDS system automatically negotiates the maximum baud for the system. All data transfers between the host computer and the station module are at the specified baud rate; maximum performance is at the highest rate the computer supports. Use the BAUDCHK command to determine and set that rate. However, if the software displays communications error messages, reduce the baud rate.
	Use the BAUD command to change the baud rate. The possible rates are 2400, 4800, 19200, 38400, and 57600 baud. If the BAUD command is entered with no rate value, the baud window appears over the debug screen. To select a rate from this window, use the arrow keys to highlight the rate, then press $<$ CR $>$ or double click the mouse when the cursor is on the desired baud rate.
Standard Memory Mapping	Various MCU designs require different memory map configurations of the MMDS system. The appropriate memory map is specified in a personality file for each MCU that the EM supports. These files are shipped with the separately purchased EMs. Refer to the appropriate EM user's manual to determine the personality files used by a particular EM module. Personality files are usually installed in the directory from which the MMDS software is executed. If a personality file is not located in that directory, the software displays a search window used to find the correct file.
	The MMDS operating software automatically loads the default personality file that corresponds to the EM module currently connected.

Operation Fundamentals

Custom Memory Mapping For creating custom memory configurations, use the customize memory map (SETMEM) command. When this command is entered, the set memory window appears over the debug screen. Via this window, as many as four blocks of RAM and four blocks of ROM can be defined. (ROM is write-protected; attempting to write to ROM stops program execution.)

NOTE: The SETMEM command can be used to expand the normal RAM and ROM ranges temporarily during debugging. Be sure to restore the original size and configuration of the MCU memory before final debugging. Otherwise, the code could fail to fit or run in an MCU's memory space.

For each memory block, specify the address range and memory type. To write the map to a file, press the F6 function key, then enter a filename in response to the prompt. To prevent loss of system files, a custom filename should not duplicate any files shipped with an EM module. Press the F7 key to apply the map to memory without saving the map to a file for future use. To cancel the command, press <ESC>.

Use the load personality file (LOADMEM) command to load a stored custom map during future emulation sessions. Note that the LOADMEM command can be part of the start-up script file, so that loading the custom map becomes an automatic part of MMDS start-up (.MEM files also can be loaded at start-up by using the –M option with the MMDS executable.)

The LOADMEM command also can be used to restore the standard memory mapping. Refer to the appropriate EM user's manual to determine the default personality files used by a particular EM module.

MOTOROLA

Initializing the	The MMDS platform board can supply an oscillator clock source for the
Clock Speed	MCU's OSC1 input. Clock control is available via the OSC command.
	Note that many EMs require a specific jumper configuration so that this
	clock source can be used. Refer to the specific EM user's manual for EM
	clock source information.

For the MMDS05, five clock frequencies are available: four internally generated clock frequencies, 8 MHz, 4 MHz, 2 MHz, and 1 MHz and an external clock source. The external clock source should be supplied via the white logic clip of pod A. Entering the emulator clock (OSC) command without the designated frequency brings up the temporary MMDS emulator clock frequency window near the center of the debug screen.

For the MMDS08, six clock frequencies are available: five internally generated clock frequencies, 16 MHz, 8 MHz, 4 MHz, 2 MHz, and 1 MHz, and an external clock source.

Loading User Software Software for the target system must be available on the host computer in S-record format. Use the LOAD command to load an S-record file into the emulator and the accompanying map (symbol) file into the host computer. The assembler shipped with the MMDS (CASM) has the ability to generate a current map each time an assembly program is assembled.

The specific S-record to load can be specified on the command line by typing the S-record filename after the LOAD command. If the file has the extension.S19, then the extension can be omitted. Alternatively, if no filename is specified, then a search window appears, displaying the files with a.S19 extension in the current directory.

Initializing Memory During a debugging session, specific memory locations should contain known values. The required values are stored in memory as numeric values or as instructions assembled individually. The commands that store and manipulate the contents of memory are described in the following paragraphs.

Operation Fundamentals

InitializingThe assemble instructions (ASM) command is important for making
minor alterations to object code. This command displays the specified
address and its contents followed by a prompt. Enter a valid instruction
and press <CR>. The command assembles the code, stores the code in
memory at the indicated address, and displays the instruction. The
command then updates its location counter and displays the updated
address and a prompt for the next instruction. The ASM command
continues to assemble code one line at a time until a period (.) is entered.

- **NOTE:** Changes made to code via the ASM command cannot be saved to an S-record file or to a source code file. This command should be used only to create and modify code to be run during the current debug session.
- **NOTE:** If the source/code F2 window shows source code and the ASM command is used to modify the code, the source/code F2 window continues to show unmodified source code. Enter the CLEARMAP command to delete the source code display. To incorporate modifications into source code, reassemble the code and download again.

The disassemble instructions (DASM) command complements the ASM command. The DASM command allows memory contents to be disassembled, displaying the assembly instructions that correspond to the values in the specified memory address range. Each DASM command disassembles three instructions and displays the addresses, the opcodes, and the operands where appropriate. When the DASM command is entered with two addresses, it disassembles instructions beginning at the first address and ending with the instruction at the second address. If the range includes three or more instructions, only the last three disassembled instructions are displayed in the debug F10 window. The entire block is written to a log file when one is open.

Initializing MemoryThe block fill (BF) command allows placement of numeric values in a
block of memory addresses. This command defines a block of memory,
then places a byte or word pattern throughout the range.

The memory modify (MM) command lets the user interactively examine and modify contents of memory locations. If any data arguments are entered with this command, the system stores the values beginning at the specified address.

When only an address is supplied, the command displays the contents of the address followed by a prompt. Enter the value and press <CR>. The command displays the next address and its contents. The command continues to store the values entered until a period (.) is entered.

Both the BF and MM writes to memory are verified; a "write did not verify" message is displayed if the write could not be verified. Note that this message may be acceptable in some situations, such as writing to registers that have write-only bits.

MMDS0508OM/D

Operation Fundamentals

System Commands

System commands for the MMDS perform these functions:

- Executing commands contained in script files
- Obtaining information about the emulator and the host system
- Capturing and saving data displayed on the screen in a log file
- Controlling the format of the debug screen
- Leaving the MMDS environment temporarily or permanently

The following paragraphs cover usage of the system commands.

Script Commands The execute script file (SCRIPT) command reads commands from a script file and passes them to the command interpreter for execution. Entering the one SCRIPT command has the same effect as entering the sequence of commands contained in the script file individually. Using script files saves time and promotes accuracy.

A script file is a text file of MMDS commands and is appropriate for any sequence of commands that is used often. A special script file, given the filename STARTUP.05 or STARTUP.08, executes automatically each time the MMDS software is loaded.

Sometimes a script file must contain a pause between commands. The pause (WAIT) command causes the command interpreter to wait before processing subsequent commands. As part of the WAIT command, the wait time can be entered in seconds. If a time value for the WAIT command is not entered, the command interpreter pauses for five seconds.

NOTE: All values entered on the MMDS command line are hexadecimal. The input value 10, for example, is the decimal value 16.

The BELL command will sound the computer bell the specified number of times. This is useful to let the user know script command execution has reached a certain point.

The REM command adds a display comment to a script file. When the script file is executed, the system displays this comment.

NOTE: All other MMDS commands can be contained in the script file.

InformationThe EVAL command performs mathematical operations on two
numerical arguments. It displays the value of the result in hexadecimal,
decimal, octal, and binary formats denoted by the suffixes H, T, O, and
Q. If the value is equivalent to an ASCII character, the ASCII character
also is displayed. This command supports addition (+), subtraction (-),
multiplication (*) and division (/).

The REG command displays the contents of the CPU registers in the debug F10 window. The command also will display the instruction pointed to by the current program counter value.

The temporary stack window appears near the center of the debug screen when the STACK command is entered. This window displays the contents of the SP register at the top of the window. The 12 bytes at the top of the stack are displayed to the left. The interpretation of the stack shown to right in the window is valid only if the last push to the stack was caused by an interrupt.

NOTE: The interrupt stack data to the right side of the window is an interpretation of the top five bytes on the stack. If the last push to the stack was due to a BSR or JSR instruction, five bytes were not pushed to the stack and the interrupt stack information is invalid.

For information about a highlighted line in the source/code F2 window (filename, line number, address, and so forth) use the INFO command.

To display the value of a symbol defined in a map (symbol) file, use the WHEREIS command.

The display version (VER or VERSION) command displays the version number of the host software and the personality file.

The system information (SYSINFO) command shows the amount of host computer memory remaining.

Operation Fundamentals

The display memory map (SHOWMEM) command displays the RAM and ROM range of the current map.

The display help information (HELP) command displays a dialog window from which to access the MMDS help system. Note that the help system is context sensitive: Highlight an element of a screen, then press the F1 help key for corresponding help information.

The chip help information (CHIPINFO) command gives access to register and user vector locations, MCU memory-map, and pin-out information specific to the part being emulated. Note that this help information is only available on certain parts. A message is displayed if no help is available. Note that the help system is context sensitive: Highlight an element of a screen, then press the <CR> for corresponding help information.

The view file (VF) command allows for text file viewing within a pop-up screen.

Log File Commands

The MMDS can maintain a log file that will capture events displayed on the debug screen. Entries in the log include:

- Commands entered on the command line
- · Commands read from a script file
- Responses to commands
- Error messages
- Notifications of changes in status, such as breakpoints and WAIT or STOP instructions.
- Pictures of the main screen
- Pictures of the bus state analyzer data screen

With the log file (LF) command, a file can be opened to receive information being logged. If the specified file already exists, the system allows appendage of the current log information to that file, or replacement of file contents with the current log information. While the log file remains open, the log information is written to the file. Enter another LF command to terminate logging to the file.

NOTE: The LF command does not automatically append a filename extension to log files. Motorola recommends that the extension .log for log files be used.

The save screen (SNAPSHOT) command will save the debug screen to an opened log file.

The first and last 20 records of analyzer data can be logged by first using the upload trace buffer (GETBSA) command to upload the analyzer data. The go to trace buffer start (HOMEBSA) command followed by a log bus state analyzer (SCREENBSA) command will save the opening records in the bus state analyzer data to an open log file. The go to trace buffer end (ENDBSA) command followed by a log bus state analyzer (SCREENBSA) command will save the ending records in the bus state analyzer data to an open log file.

Debug ScreenThe source window display (SOURCE) command toggles between
source code and disassembled code in the source/code F2 window
located at the upper right of the debug screen. On entering MMDS
software, the window defaults to disassembled code, the window title is
CODE F2, and window contents are a disassembled representation of
MCU memory. In this object code display, the disassembled instructions
change when corresponding bytes of memory change. Source code will
be displayed if an S-record file and its corresponding map file are loaded
and the PC points to a memory area covered by the map file.

Once a .MAP file has been loaded and the PC points to an area of user code, the SOURCE command can be used to toggle between source code and object code. If a mouse is installed, the symbols that appear at the bottom of the window can be selected. Use the mouse or arrow keys to scroll through the information in the window. Note that the F2 key does not pertain to this window if it shows source code.

NOTE: When memory data that was generated from a source file is altered, the modified code appears in the code window but not the source file window. Use the CLEARMAP command to delete the source file from the source code display.

Operation Fundamentals

The resize source window (ZOOM) command toggles the size of the source window between normal and enlarged. The enlarged window can be helpful by allowing improved visibility of comments in the source file. The enlarged window will remove the CPU registers window from the debug screen. The registers will be re-displayed by typing the ZOOM command again.

The set screen colors (COLORS) command can be used to alter the default screen colors displayed in the various windows of the emulation environment. To return to the default colors, delete the filename COLORS.05 or COLORS.08 in the MMDS working directory.

Exit theThe debug environment can be exited either temporarily or permanently.EnvironmentTo shell to DOS temporarily, use the SHELL command. Type EXIT at the
DOS prompt to return to the MMDS environment.

To exit the current debug session permanently, execute the EXIT or QUIT command. The emulation system also can be exited by pressing the Alt-X keys.

MMDS0508OM/D

MOTOROLA

Debug Commands

	The MMDS commands that apply to the debugging phase of system development are described in this section.
Setting CPU Registers	The contents of the CPU registers and the condition code register are displayed in the CPU window. These registers – A, H (MMDS08 only), X, PC, SP, and CCR – contain the environment for execution of an instruction and, after the instruction has been executed, the results. Any of these registers, except SP, can be modified by entering the corresponding register designator command and an appropriate value. The commands that affect the CPU registers are A, ACC, X, XREG, PC, CCR, H, I, N, Z, and C. Additional commands to support the M68HC08 MCU are HX, HREG, and V. When <cr> is pressed, the register display shows the new value. Refer to Command-Line Commands for examples on how to modify CPU register values.</cr>
Memory Display	Memory contents are displayed in the memory F3 window. When code execution is stopped, 32 consecutive bytes of memory are displayed in both hexadecimal and ASCII format. The memory display (MD) command specifies the beginning location of the 32 bytes displayed. The window can be scrolled via the mouse or by selecting the window (F3) and using page up/down keys to view other memory ranges.
	A special use of the memory F3 window is for displaying real-time memory during code execution. The display real-time memory (RTMEM) command specifies the beginning location of a 32-byte clock to display and periodically update during code execution.
	The display real-time variable (RTVAR) command and display variable (VAR) command display the specified address and its contents in the variables F8 window. Real-time variables are periodically updated during code execution while normal variables are only displayed when code execution is stopped.

Operation Fundamentals

As many as 32 variables can be declared in the variables F8 window. The window shows 11 variables at a time. If a map file has been loaded, symbols (labels) from the source code can be used as arguments.

The variables can be displayed in byte, word, or string format. A byte display is hexadecimal and binary, while a word display is hexadecimal and decimal, and a string display is ASCII.

For an ASCII string, the number of characters displayed can be specified. Control and other non-printing characters appear as periods (.).

Reset Control of
the EmulationThe RESET command resets the emulation MCU and sets the PC to the
contents of the reset vector. User code is not executed during this
command. The RESETGO command carries out the same actions as
the RESET command, then starts code execution from the PC-value
address. The RESETIN command allows the reset signal to enter into
the emulation system through the target cable; this signal must be
enabled for correct operation of the WAIT4RESET command. The
RESETOUT command allows the RESET command to send a reset
signal out the target cable.

Using Breakpoints The set instruction breakpoint (BR) command sets a breakpoint at a specific address or at each address of a range. Breakpoint addresses must be instruction fetch (opcode) addresses. A maximum of 64 breakpoints can be set. If the BR command is entered without any address, the command displays all active breakpoints. To clear breakpoints, use the clear breakpoints (NOBR) command.

An instruction breakpoint occurs when the MCU accesses an instruction at a specified address or an address within a specified address range. When execution arrives at a breakpoint address, emulation stops just before execution of the instruction at that address and the software displays this message:

idle Inst brkpt/Illegal Address

MMDS0508OM/D

72
A properly defined breakpoint permits analysis of the contents of registers and memory locations and the states of various signals at designated addresses in the program.

NOTE: The idle status also occurs if the system attempts to execute code at an address not defined as a valid memory address.

TracingThe step (ST, STEP, and T are identical) commands will execute aInstructionsspecified number of instructions beginning at the current PC value. The
STEPFOR command begins instruction execution at the current PC
value, continuing until a key is pressed or until execution arrives at a
breakpoint. The STEPTIL command executes instructions from the
current PC value to a specified address.

NOTE: Do not use any step command (ST, STEP, STEPFOR, STEPTIL, or T) if the PC points to internal RAM (such as option RAM) or EEPROM or if the code branches into internal RAM or EEPROM.

The step commands are not real-time. They execute one instruction at a time, then return control to the monitor. Do not rely on timer values.

Execution

Instructions

The go (G or GO) command starts emulation at the address in the PC or at an address entered with the command. Execution continues until it encounters a breakpoint, until the bus analyzer (optionally) stops it, or until the STOP command is entered. If a second address is entered with the G or GO command, execution stops at the second address. The GOTIL command starts emulation at the location in the PC and stops at the address entered with the command. The STOP command stops the emulator.

The RESETGO command resets the MCU, fetches the reset vector address, and begins code execution at that address.

Bus State Analyzer Commands

The bus state analysis (BSA) feature of the MMDS allows for analyzing the operation of the MCU being emulated. The address, data, freerunning timer value, and select test points can be captured and analyzed using this powerful feature. This section introduces the analyzer commands, with a more detailed view of analyzer usage given in **Bus State Analysis**.

Configuring the	The BSA is configured initially by pressing F5 to enter the BSA setup
Analyzer	screen. Various trigger points and trigger modes can be configured in
	the setup screen. The trigger configurations can be saved and used
	during future debug sessions using the load bus state analyzer setup
	(LOADTRIGGERS) command.

The timetag clock source (TIMETAG) command configures the resolution of the free-running timer value captured in the analyzer.

The set multiplexer (SXB) command controls the option to either increase the bandwidth of the free-running timer counter or enable capturing additional target test points through pod B.

Capturing Analyzer Data

Once the analyzer is set up to a desired trigger configuration, the arm bus state analyzer (ARM) command enables the analyzer to begin capturing bus cycles in the trace buffers.

The analyzer can be configured to disarm after the analyzer has found the trigger and subsequently filled its trace buffer. Alternatively, the disarm bus state analyzer (DARM) command deactivates the analyzer bus cycle captured from the command line.

Viewing Analyzer The captured BSA data is stored initially in trace buffer memory on the MMDS platform board. The data is uploaded to the host computer and viewed on screen by pressing the F4 function key. Alternatively, the upload trace buffer (GETBSA) command will upload the analyzer data without displaying it to the screen. The set BSA timetag mode (BSATT)

command will specify the format for displaying timetag data in the analyzer data screen. The set BSA display mode (BSAMODE) command will specify the format for displaying records in the analyzer data screen. Subsequently, pressing the F4 key will display the data to the screen without requiring another data upload.

The analyzer can be set up to detect up to four trigger events, referred to as event A, event B, event C and event D. If a captured record is one of the four trigger events, the event will be displayed in the BSA data screen. To quickly see where an event A first occurred in a set of captured analyzer data, use the go to next A event (NEXTA) command to display the bus analyzer data of the first A event. Executing the command again will find and display the next event occurrence. If no more events exist, the last captured cycle is displayed. Identical commands for events B, C, and D are also available.

The go to next event (NEXTE) command searches for and displays the next occurrence of any of the four possible events.

The print trigger (SHOWTRIGGER) command finds the first occurrence of a trigger event in the bus state analyzer data.

The first and last 20 records of analyzer data can be saved to an open log file by first using the upload trace buffer (GETBSA) command to upload the analyzer data. The go to trace buffer start (HOMEBSA) command followed by a log bus state analyzer (SCREENBSA) command will save the opening records in the bus state analyzer data to an open log file. The go to trace buffer end (ENDBSA) command followed by a log bus state analyzer (SCREENBSA) command followed by a log bus state analyzer (SCREENBSA) command to trace buffer end (ENDBSA) command followed by a log bus state analyzer (SCREENBSA) command will save the ending records in the bus state analyzer data to an open log file.

The display trace buffer (SHOWBSA) command will dump ranges of analyzer data to the debug window.

Operation Fundamentals

MMDS0508OM/D

MOTOROLA

Bus State Analysis

Contents

roduction	78
perating the Bus Analyzer	79
Defining Events	79
Selecting the Trigger Mode	84
Selecting Options	86
Collecting Bus Data	87
Viewing Data	88
Searching the Trace Buffer	95
Using the Time-Tag Clock	96

MMDS0508OM/D

Bus State Analysis

Introduction

The MMDS bus state analyzer (BSA) shows the logical state of the target MCU bus. Next to emulation of a target-system MCU, this is the most important capability of a development tool: it enables you to determine what is occurring in a system without actually disturbing the system.

At the end of each MCU clock cycle, the BSA takes a snapshot of the logical states of the target MCU bus. Then the analyzer stores the snapshots in the trace buffer, according to its mode. (This action is known as storing cycles.) The trace buffer can hold as many as 8191 cycles. (Note that the analyzer is a *bus state* analyzer: It does not show signal hold or setup times.)

As part of analyzer initialization, you define certain patterns of logical states as events (or terms). Then you select the analyzer mode: continuous, counted, or any of five sequential modes. This determines which cycles the analyzer stores.

Data collection (cycle storage) begins when you arm the analyzer and start program execution. Data collection continues until execution stops, through a specified number of events, or through a defined sequence of events.

The bus state analyzer provides several ways to view collected data: raw data, disassembled instructions, mixed raw data and disassembled instructions, or source code.

MMDS0508OM/D

MOTOROLA

Operating the Bus Analyzer

	To operate the bus state analyzer, you must define events (or terms), select the bus state analyzer mode, specify any options, collect data, then view the data. The following paragraphs explain these actions.
Defining Events	An event, is a 32-bit value, named A, B, C, or D. You define an event by entering values in one of the term lines of the bus state analyzer setup screen (see Figure 11). To bring up this screen, press the F5 function key from the debug screen. Table 8 lists event-definition values and their meanings; Table 9 lists key commands for the setup screen.
	When the setup screen first appears, the cursor is at the Trm en (term enable) field of the event A line. Using the arrow keys or mouse, move the cursor to the space between the Trm en brackets for the desired term. Press the space bar (or point to the space with the cursor and click the left mouse button) to put an X in this space. Then move the cursor to other fields to enter values that define the rest of the event. For control signal and logic clip fields, type 0, 1, or X (don't care). For the address and data, use either the hexadecimal field or the binary field, Type a hexadecimal digit or X in the hexadecimal field spaces; type a 0, 1, or X in the binary field spaces.
NOTE:	Only five of the pod A logic clips are used in event definition. Other logic clips can be captured only in the logic analyzer data.
	When you have defined your terms, press the F7 key to apply the definitions. If you want to save the definitions to a file, press F6 (then enter a filename in response to the prompt) before you press F7.
NOTE:	If you use the backspace or delete key while in a field, you must completely refill the field with 0, 1, or X or the software will not allow you to leave the field.

Operating the Bus Analyzer

	A inary XXXXXX XXXXXX XXXXXX XXXXXX XXXXXX		
	Hex XX XX XX XX XX XX XX XX XX XX XX XX XX	ulu vin	4000 CANCEL
oint Setup ᆖ	DRESS Binary XXXXXXXXXXXXXXX XXXXXXXXXXXXXXXXXXXX	tup uous: Events 0 d: Events 0 tial A+B->C+D tial A->B->C-> +B+C+D	s (18190): ng complete :CLEAR <esc>:</esc>
: / Breakp	H KXXXXX XXXXXXXXXXXXXXXXXXXXXXXXXXXXXX	alyzer Se Contin Sequen Vent of A	iger cycle in recordi ECUTE F8
yzer Events	MHZXXXX MHAXXXX OMGXXXX MHJXXXX GMZXXXX	us State An Cycles Cycles C+D ->C †D I ->C †D I about Nth e	∕ post trig mulator whe SAUE F7:EX
== Bus Anal	Germ B: C 1 × × × × × × × × × × × × × × × × × ×	B inuous: All ced: All antial A+B+ ential A->B Sequential	ninal Count [] Stop e 35:LOAD F6:
		[] Conti [] Conti [X] Seque [] Seque []	Terr F1 :HELP
	F SECCE		

Freescale Semiconductor, Inc.

Figure 11. Bus State Analyzer Setup Screen

MMDS0508OM/D

Freescale Semiconductor, Inc.

Field	Values	Meaning
Trm en – Term enable	X Blank	Enable the term Disable the term
Brk en – Breakpoint enable	X Blank	Make the term a data breakpoint (hardware breakpoint) (1) Do not make the term a breakpoint
RNG – Range	X Blank	Makes the event the end of a range Range does not apply to the event
! – Negation	X Blank	Complements the term Does not complement the term
R/W – Read/Write	0 1 X	MCU write cycle MCU read cycle Either read or write cycle
D/I – Data/Instruction	0 1 X	Instruction fetch Data Don't care
Pod A Clips: GRN (Green), YEL (Yellow), ORG (Orange), RED (Red), BRN (Brown)	0 1 X	Logic level 0 Logic level 1 Don't care
Address Hex	0–F, X	Hexadecimal address value (X is don't care)
Address Binary	0, 1, X	Binary address value (X is don't care)
Data Hex	0–F, X	Hexadecimal data value (X is don't care)
Data Binary	0, 1, X	Binary data value (X is don't care)
(1) You may have to disarm the screen.	e BSA before	you can see data in the BSA data

Table 8. Event Definition Values

For More Information On This Product, Go to: www.freescale.com

Name	Key	Description								
Move Down	\downarrow	Moves cursor down to lower line.								
Move Up	↑	Moves cursor up to higher line.								
Move Left	\leftarrow	Moves cursor to selection to the left.								
Move Right	\rightarrow	Moves cursor to selection to the right.								
Next Item	Tab	Moves cursor to next item								
Preceding Item	Shift-Tab	Moves cursor to preceding item								
HELP	F1	Displays Help window.								
LOAD	F5	Loads a trigger file (.SET).								
SAVE	F6	Writes definitions to a trigger file (.SET).								
EXECUTE	F7	Applies definitions to bus analyzer and returns to Debug screen.								
CLEAR	F8	Clears definitions.								
CANCEL	ESC	Cancels definitions and returns to Debug screen.								

Table 9. Setup Screen Key Commands

82

MMDS0508OM/D

MOTOROLA

Part of event definition can be defining ranges from one term to another. To establish a range, you put an X in the range field of a term-definition line of the setup screen. But note that the event A line does not have a range field. This is because event A can only start a range.

To configure any of the four range patterns:

A to B:	Put an X in the event B range field.
B to C:	Put an X in the event C range field.
C to D:	Put an X in the event D range field.

A to B and C to D: Put Xs in the range fields of events B and D.

Also note that you need not define all four terms. When you have defined all appropriate terms, you are ready to select the bus state analyzer trigger mode per **Selecting the Trigger Mode**.

Remember that the MMDS stores event definitions as 32-bit values. The R/W bit is the most significant bit (MSB); the D0 bit is the least significant bit (LSB). A range is between two such 32-bit values, *not* between values of address fields. In range mode, the BSA triggers every time the input falls between the range starting term (the first 32-bit value) and the range ending term (the second 32-bit value).

MMDS0508OM/D

Bus State Analysis

Bus State Analysis

Selecting the Trigger Mode

To select a mode, put an X in one of the nine mode fields in the bottom half of the bus state analyzer setup screen. **Table 10** explains the modes.

Mode	Description							
Continuous: all cycles	When you enter the ARM and GO commands, the trace buffer begins storing data from first cycle. This continues until execution arrives at a breakpoint, or until you enter the DARM or STOP command.							
Continuous: events only	When you enter the ARM and GO commands, the trace buffer begins storing data when data matches an event definition. This continues until execution arrives at a breakpoint, or until you enter the DARM or STOP command.							
Counted: all cycles	When you enter the ARM and GO commands, the trace buffer begins storing data from the specified number from first cycle. (A breakpoint can stop storage before the analyzer stores the specified number of cycles, as can the DARM or STOP command.)							
Counted: events only	When you enter the ARM and GO commands, the trace buffer begins storing data that match an event definition for the specified number of cycles. (A breakpoint can stop storage before the analyzer stores the specified number of cycles, as can the DARM or STOP command.)							
A+B+C+D	When you enter the ARM and GO commands, the trace buffer begins storing data from the first cycle run. This continues through the occurrence of event A, B, C, or D (whichever is enabled); data storage ends after the specified number of post-trigger cycles.							
A+B→C+D	 When you enter the ARM and GO commands, the trace buffer begins storing data from the first cycle. This continues through the occurrence of two events: A or B, followed by C or D. Data storage ends after the specified number of post-trigger cycles. If you select this mode, you must enable event A, event B, or both. You must enable event C, event D, or both. Otherwise, the bus state analyzer never can be triggered. 							

Table 10. Analyzer Modes

No. In Description									
Mode	Description								
A→B→C!D	When you enter the ARM and GO commands, the trace buffer begins storing data from all cycles. This continues through the occurrence of three events, A, B, and C, in order, if event D does not occur. (If D occurs, the sequencer starts again looking for event A.) Data storage ends after the specified number of post-triggert cycles. If you select this mode, you must enable events A, B, and C. Otherwise, the bus state analyzer never can be triggered. If you disable event D, you convert this mode to a simple, three-event sequence.								
A→B→C→D	When you enter the ARM and GO commands, the trace buffer begins storing data from all cycles. This continues through the occurrence of four events, A, B, C, and D, in order. Data storage ends after the specified number of post trigger cycles.If you select this mode, youmust enable all four events A, B, C, then D. Otherwiser, the bus state analyzer never can be triggered.								
Nth event: A+B+C+D	When you enter the ARM and GO commands, the trace buffer begins storing data from N occurrences of cycles that match the definitions of events A, B, C, or D (whichever are enabled). Then the bus state analyzer captures the next 4096 cycles.								

Table 10. Analyzer Modes (Continued)

By selecting the terminal post trigger count, the user can control the number of cycles that is stored. This can be used to speed uploading of the BSA data if only a small portion of data is needed.

Note that the terminal count or post trigger cycles are valid only for counted or sequential modes. For a counted mode, this field specifies the number of cycles to be stored. For a sequential mode, this field specifies the number of cycles to be stored *after* the trigger sequence occurs.

An X in the stop-emulator field stops program execution when bus state analyzer recording is done.

After selecting the mode, you can begin collecting data by pressing the F7 (execute) key. This returns you to the debug screen. **Selecting Options** explains how to continue from this point.

Bus State Analysis

Other function keys in the setup screen allow for clearing of the setup screen as well as storing and using setup files. To cancel the entire bus state analyzer setup, press <ESC>. To clear the setup screen, making it ready to redefine events and reselect a mode, press the F8 key.

To save this bus state analyzer setup to a file, press the F6 key: a subordinate window prompts for a filename. To load a bus state analyzer setup already saved to a file, press the F5 key: a subordinate window prompts for the filename. Entering the filename fills in the setup-screen values; press the F7 key to return to the debug screen. (An alternative way to load a saved setup is to enter the LOADTRIGGERS command from the debug screen. This method bypasses the setup screen.)

Selecting Options An optional part of analyzer setup is specifying the frequency and source of the time tag clock. This clock provides a time reference value in each frame of the trace buffer. (Using the Time-Tag Clock gives more information about the time tag clock.) Enter the time tag clock source (TIMETAG) command; this command brings up the small time-tag window in the center of the debug screen. This window gives you these choices (16 Mhz is the default):

16 Mhz	Selects the 16 MHz oscillator.
8 Mhz	Selects the 8 MHz oscillator.
4 Mhz	Selects the 4 MHz oscillator.
2 Mhz	Selects the 2 MHz oscillator.
1 Mhz	Selects the 1 MHz oscillator.
External	Selects the external clock
Programmable	Selects the programmable clock.
Emulator	Selects the emulator clock, the bus clock of the emulating MCU.

If you select *External*, connect the TT_OSC clip (white) of the pod B cable to the external clock source. (The pod B connector is the closest to the front of the station module.

If you select *Programmable*, you must enter a frequency in the range of 50 Hz to 50 kHz, as the pop-up window requests. The MMDS will provide a frequency close to the desired frequency and display it to the screen. For example, entering 1000 will result in a timetag frequency of 1024 Hz.

If you select *Emulator*, the system uses the MCU's bus clock. In effect, this stores the number of bus cycles.

Another setup option is specifying whether to store high-order time tag bits (increasing the time tag from 16 to 24 bits) or data from the pod B logic clips. To do so, enter the set multiplexer (SXB) command with the appropriate tags or clips parameter value. (The default is clips.)

CollectingTo begin data collection, enter the ARM command, which arms the busBus Datastate analyzer. The BSA status changes to Armed. The bus state
analyzer mode appears on the status line.

Next, enter the GO command, which starts program execution. The MCU status changes to Running. If you are in a sequential mode, you may be able to follow the occurrence of events from the highlighting changes. (Such highlighting changes may be too fast to be helpful.) Data collection continues through the specified number of counted events or post-trigger cycles, or until code execution stops.

NOTE: The GO command is not the only program-execution command that works with the bus state analyzer. Alternative commands are: G, GOTIL, STEP, STEPFOR, STEPTIL, and T.

If you enter either trace command (STEP or T) without a parameter value when the bus state analyzer is armed, the analyzer trace window appears over the debug screen. This temporary window shows the cycles of the instruction just traced.

To manually halt data collection, enter the DARM or STOP command. Entering the DARM command disarms the analyzer; the analyzer state changes to Disarmed. (The DARM command does not stop emulation.) Entering the STOP command stops data collection and emulation.

When data collection stops, you are ready to look at the data, per **Viewing Data**.

Bus State Analysis

Viewing Data To view bus analyzer data, press the F4 function key from the debug screen; this key brings up the bus state analyzer data screen (Figure 12). The word loading flashes in the upper right corner of the screen as the software loads trace-buffer contents into the host computer. The data is not fully visible until loading is done (loading stops flashing), although cycles immediately preceding and following the trigger cycle become valid early during loading.

NOTE: Be sure to use the highest possible baud rate. If you use a lower baud rate, it can take several minutes to load trace-buffer data into the host computer.

The data screen displays trace buffer contents as raw bus cycles, as disassembled instructions, as mixed instructions and raw bus cycles, or as source code. In the mixed display, the associated raw bus cycles follow each disassembled instruction. Press the F4 key repeatedly to change the display from one form to another. **Table 11** explains other key commands for the data screen.

If the data capture mode was sequential, the data screen includes a trigger indicator (<T>). This screen indicator separates the pre-trigger and post-trigger cycles.

The F1 and F2 keys mark cycles <1> and <2>, respectively. The bus state analyzer uses these marked cycles in time-tag difference calculations and logging. The software displays the time tag difference, Δc , in the lower right corner of the screen. (An **R**, by the Δc value, indicates a rollover of the time tag value between the occurrence of cycles <1> and <2>.)

If a log file is open, you can save bus state analyzer data to the log file. The system logs the information in the selected view mode. While logging is under way, the SHOWTRIGGER, NEXTA, NEXTB, NEXTC, NEXTD, and NEXTE commands log trace buffer cycles. To copy the current data screen to the log file, use the Alt-S key command. Use the Alt-P key command to log from the <1> cycle to the <2> cycle.

MMDS0508OM/D

88

Freescale Semiconductor, Inc

Bus State Analysis Operating the Bus Analyzer

∏ ⁺	_		0,0000	AL.																		,
Time tag	abs:nSec	5.00000000E+02	1.00000000E+03	1.50000000E+03 <	2.00000000E+03	2.5000000E+03	3 . 00000000E+03	3.5000000E+03	4.0000000E+03	4.5000000E+03	5.0000000E+03	5.5000000E+03	6.00000000E+03	6.50000000E+03	7.00000000E+03	7.5000000E+03	8.0000000E+03	8.5000000E+03	9.00000000E+03	9.5000000E+03	1.0000000E+04	c: n ALT-N:filename
POD A	gpbgyorb	00000000	00000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	00000000	C>:exit A T-S:log scr
e Analyzer POD B	gpbgyorb	00000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	000000000	00000000	F8:tt <es c1<>c2 AL</es
Bus Stat Term				. В.			:	:	:	:	:	:	:	:	:	:		:	:			F7:data LT-P:log
_ 22	1.2	10	11	11	11	01	10	11	11	11	61	10	11	11	11	11	11	10	11	11	10	F4:Disp :goto A]
Data		30	81	11	11	12	30	82	ØE	ØE	9F	81	84	40	61	BB	B6	B 6	81	12	A9	73: Find F1, F2, T
Address		011A	011B	6681	0081	0081	011C	011D	0082	6682	0082	011E	011F	GGFD	OOFE	GOFF	B1BA	BIBA	0108	0081	010C	" F2: "2" I
Frame		H	2	m	4	5 C	9	~	8	6	10	11	12	13	14	15	16	17	18	19	20	F1:"1 = ALT-f

Figure 12. Bus State Analyzer Data Screen

MMDS0508OM/D

MOTOROLA

Bus State Analysis

For More Information On This Product, Go to: www.freescale.com

Name	Key	Description
Scroll Down	\downarrow	Scrolls cursor down to next line.
Scroll Up	↑	Scrolls cursor up to preceding line.
Page down	Page Down	Scrolls down to next page.
Page up	Page Up	Scrolls up to preceding page.
Home	Home	Scrolls to first frame.
End	End	Scrolls to highest-numbered frame.
Next A	Alt-A	Scrolls to next term A frame.
Next B	Alt-B	Scrolls to next term B frame.
Next C	Alt-C	Scrolls to next term C frame.
Next D	Alt-D	Scrolls to next term D frame.
Next E	Alt-E	Scrolls to next frame that contains any term.
"1"	F1	Marks highlighted frame as cursor 1.
"2"	F2	Marks highlighted frame as cursor 2.
Go to cursor 1	Alt-F1	Scrolls to cursor 1.
Go to cursor 2	Alt-F2	Scrolls to cursor 2.
Go to trigger	Alt T	Scrolls to trigger frame.
Find	F3	Defines a search pattern and scrolls to frame that matches pattern.
Disp	F4	Changes display mode to next in sequence: Raw, Instructions, Mixed, Source.
data	F7	Toggles display in Data column between hexadecimal and binary.
tt	F8	Changes time tag mode to next in sequence: absolute, relative, none, cycles.
Log cursor 1 - cursor 2	Alt-P	Writes frames from cursor 1 through cursor 2 to log file.
Log screen	Alt-S	Writes the frames displayed on the screen to log file.
Return	ESC	Return to Debug screen.
Display source name	Alt-N	Display the source name: line number

Table 11. Data Screen Key Commands

Freescale Semiconductor, Inc.

Figure 12 shows the data screen as it displays raw bus cycles. Figure 13 shows this screen's display of instructions, Figure 14 shows a mixed instructions and raw bus cycle display, and Figure 15 shows this screen's display of source code. (Repeatedly press the F4 key to cycle through display modes.)

NOTE: The instruction display includes only the frames that contain instruction fetch cycles; the instructions are displayed in disassembled form. A frame is one line of BSA data, valid at the end of a bus cycle. Frames are numbered sequentially from the first bus cycle.

For a source code display (**Figure 15**), the source file must be in the directory with the object file. The source code display shows information similar to the instructions display, but it also displays the comments from the source code file.

MMDS0508OM/D

Bus State Analysis

Semiconductor, Inc. Freescale

Bus State Analyzer

LOC2

0110

Frame

011C

0100

0100

20

311E

#0C2 LOC2 EOOJ

3C81 3C81 81 8681 8681 8781 8781 8682 8682 8682 8682

010E 0110 0112

011

Operating the Bus Analyzer

START

B782 20E8 99

STAR.

-

0103

22

0101

5

01.05 0107

LOC3

INC STARTS START

5

FUNC

8

B680 8988 8788 CD0118 3C88

LOCI

LOCI

LOC2

200

E003

3081

0110

69 50

B

49

011C

Figure 13. Instructions Display

MMDS0508OM/D

F8:tt <ESC>:exit Ac:c1<>c2 ALT-S:log scrn ALT-N:filename

F7:data

LOC2

BUC RINC

9#

A900 B681

0100

Ы

0100

=

ł

H

ALT-A, B,

" F3:Find F4:Disp F7:data ,E.F1.F2,T:goto ALT-P:log

Π	+	_				~	2															-		П	
						ţ																			
	Time tag	abs:nSec		5.0000000E+02	1.0000000E+03	1.5000000E+03	2.0000000E+03	2.5000000E+03		3.00000000E+03	3.5000000E+03	4.0000000E+03	4.50000000E+03	5.0000000E+03		5.5000000E+03	6.00000000E+03	6.5000000E+03	7.00000000E+03	7.5000000E+03	8.0000000E+03		ä	n ALT-N:filename	
	POD A	gpbgyorb	5	00000000	00000000	00000000	00000000	00000000		000000000	000000000	00000000	00000000	00000000		000000000	000000000	00000000	00000000	00000000	00000000		C>:exit A	[-S:log scr	
Analuzew	POD B	groupdap	5	00000000	00000000	00000000	00000000	00000000		00000000	00000000	00000000	00000000	00000000		00000000	00000000	00000000	00000000	00000000	00000000		F8:tt <es(< td=""><td>c1<>c2 ALI</td><td></td></es(<>	c1<>c2 ALI	
Is State	Term		LOC2	:			B		LOC3	:	:					:	:	:	:	:		LOC2	F7:data	I-P:log	
	8	wi	INC	10	11	11	11	61	INC	10	11	11	11	61	RTS	10	11	11	11	11	11	LDA	f:Disp]	yoto AL	
	Data		3C81	30	81	11	11	12	3C82	30	82	ØE	ØE	9F	81	81	84	40	61	BA	B6	B681	F3:Find F4	, F1, F2, T:9	
	Address		0110	0110	011B	0081	0081	0081	011C	011C	011D	0082	0082	0082	011E	011E	011F	GGFD	GOFE	GOFF	0100	0100	" F2:"2"	A,B,C,D,E	
	Frame		Η	Ŧ	2	m	4	5 C	9	9	~	8	6	10	Ħ	11	12	13	14	15	16	17	F1 : '1	= ALT-I	

MMDS0508OM/D

MOTOROLA

Bus State Analysis

For More Information On This Product, Go to: www.freescale.com Bus State Analysis Operating the Bus Analyzer

Figure 14. Mixed Raw Cycles and Instructions Delay

Semiconductor, Inc. Freescale

Bus State Analyzer store to test reg2 store to test reg3 branch to do again to test regi subroutinel go back to main load test reg2 go back to main load test reg2 ;load test reg3 ;load test regi store go to start func1 10c2 #0 loc2 loc2 loc3 loc2 loc3 loc1 loc2 loc3 loci loc1 9# 9# 9# sta bra lda adc lda lda sr sta Ida adc adc sta inc inc inc adc sec Inc rts inc rts start func1 "I": H

Freescale Semiconductor, Inc.

Operating the Bus Analyzer

MMDS0508OM/D

Figure 15. Source Code Display

4

\$

38

49

5

69

2

11

65

Frame

Searching the The bus state analyzer includes a search utility, enabling you to search the trace buffer for a frame that contains a specific bit configuration. To start this utility, press the F3 key from the data screen. This brings up the find pattern window (Figure 16). Define a search pattern by filling in fields of this window; initially, all fields have X (don't care) values. Find searches from the point of the cursor to the end of the buffer. Use the arrow keys to move between fields. Table 12 lists the key commands for the find pattern window.

The frame field is decimal. To scroll directly to a specific frame, enter the frame number in this field. If this is a don't care entry, put a string of four Xs in this field.

Frame Address	Data	RD	— Find Term	Pattern == POD B	POD A	Forward	
		wi	ABCD	gpbgyorb	gpbgyorb	Search?	
XXXX XXXX	XX	XX	XXXX	*****	*****	¥	
	F7:1	Find	F8:Clea	ar <esc>:</esc>	CANCEL		

Figure 16. Find Pattern Window

Name	Кеу	Description
Move Left	\leftarrow	Moves cursor one character to the left.
Move Right	\rightarrow	Moves cursor one character to the right.
Next Field	Tab	Moves cursor to next field.
Preceding Field	Shift-Tab	Moves cursor to preceding field.
Find	F7	Scrolls to next frame that matches the selected pattern and returns to BSA data window.
Clear	F8	Clears the selected pattern.
Cancel	ESC	Returns to BSA data window without scrolling.

Bus State Analysis

The address and data fields are hexadecimal. In these fields, you can specify a range by using the Xs for the less-significant digits. For example, 03XX in the Address field searches for addresses in the range of 0300--03FF. You can specify an X in any digit position to cause that digit to be ignored in the search.

The R/W and D/I fields and the two pod fields are binary. Enter 0 or 1 for each bit to be used in the search, and Xs for the bits to be ignored. Setting the R/W bit searches for read bus cycles; clearing this bit searches for write bus cycles. Setting the D/I bit searches for data bus cycles; clearing this bit searches for instruction fetch bus cycles.

You can search for bus cycles in which one or more terms are true by entering A, B, C, or D in the term field. When you have defined the search pattern completely, press F7 to start the search. The search begins at the current (highlighted) frame, and proceeds toward the highest-numbered frame in the trace buffer. (To clear the fields of the screen, press the F8 key.)

Using the Time-Tag Clock

There are four time-tag display modes: absolute, relative, cycles, and none. An absolute display mode shows the time reference from the first bus cycle. A relative display mode shows the time between bus cycles. A cycle display mode shows the cycle reference from the first bus cycle. None blanks the timetag display. You can cycle through these display modes using the F8 key while the BSA data screen is open.

The data screen displays the time tag as a number of seconds when you use the 1 MHz, 2 MHz, 4 MHz, 8 MHz, or 16 MHz clock. To time the execution of a portion of the code, use either the raw bus cycle mode or the mixed mode of the display, with the absolute time-tag format. Select the beginning cycle, and press the F1 key to mark it <1>. Select the ending cycle, and press the F2 key to mark it <2>. The software calculates the time between the two frames, then displays the difference (Δc) in the lower right corner of the data screen. (An **R**, by the Δc value, indicates a rollover of the time tag value between the occurrence of cycles <1> and <2>.)

MMDS0508OM/D

96

Bus State Analysis Operating the Bus Analyzer

For example, if the beginning time tag is 3.26778887E03 and the ending time tag is 3.2677928E03, the difference is 0.00000400 seconds, or 4 μ s.

If the time tag is represented in clock periods, the procedure is the same, but the Δc value is the number of time-tag clock cycles. Multiply the result by the time-tag clock period to obtain the elapsed time between the beginning and ending cycles.

For example, if the beginning time-tag value is 219, and the ending time-tag value is 234, the difference is 15 time-tag cycles. At a time-tag clock frequency of 4 MHz, the time-tag clock period is 0.25 μ s, and the elapsed time is 3.75 μ s. Had the same time-tag values been obtained with a time-tag clock frequency of 500 kHz (a clock period of 2 μ s), the elapsed time would be 30 μ s.

MMDS0508OM/D

Bus State Analysis

Bus State Analysis

MMDS0508OM/D

MOTOROLA

Command-Line Commands

Contents

Introduction
Command Syntax
Command Syntax102Command Explanations103A — Set Accumulator106ACC — Set Accumulator107ARM — Arm Bus State Analyzer108ASM — Assemble Instructions109BAUD — Set Communications Baud Rate110BAUDCHK — Baud Rate Check111BELL — Sound Bell112BF — Block Fill113BR — Set Instruction Breakpoint114BSAMODE — BSA Display Mode115BSATT — BSA Timetag Mode116C — Set/Clear C Bit117CCR — Set Condition Code Register118CHIPINFO — Chip Help Information119CLEARMAP — Remove Symbols120COLORS — Set Screen Colors121DARM — Disarsemble Instructions123ENDBSA — Go to Trace Buffer End124EVAL — Evaluate Argument125EXIT — Terminate Host Session126
G — Begin Program Execution
GETBSA — Upload Trace Buffer
GO — Begin Program Execution
H — Set/Clear H Bit131

Command-Line Commands

HELP — Display Help Information
HOMEBSA — Go to Trace Buffer Start
HREG — Set H Register
HX — Set H:X Index Register
I — Set/Clear I Bit
INFO — Display Line Information
LF — Log File
LOAD — Load S19 File
LOADMAP — Load Symbols140
LOADMEM — Load Personality File
LOADTRIGGERS — Load Bus State Analyzer Setup
MD — Memory Display
MM — Memory Modify
MM — Memory Modify
N — Set/Clear N Bit
NEXTA — Go to Next A Event
NEXTB — Go to Next B Event
NEXTC — Go to Next C Event
NEXTD — Go to Next D Event
NEXTE — Go to Next Event
NOBR — Clear Breakpoints
OSC — Select Emulator Clock Frequency
PC — Set Program Counter
QUIT — Terminate Host Session
REG — Display Registers156
REM — Add Comment to Script File
RESET — Reset Emulation MCU158
RESETGO — Reset and Restart MCU159
RESETIN — Reset Input Enable
RESETOUT — Reset Output Enable
RTMEM — Set Real-Time Memory Block
RTVAR — Display Real-Time Variable
RTVAR — Display Real-Time Variable164
SCREENBSA — Log Bus State Analyzer Screen165
SCRIPT — Execute Script File
SETMEM — Customize Memory Map167
SETMEM — Customize Memory Map168
SHELL — Access DOS

Command-Line Commands

Introduction

Keyboard entry is the primary means of MMDS control. Individual commands are entered at the command-line prompt in the debug F10 window. The commands are used to initialize emulation memory, display and store data, debug user code, and control flow of code execution.

This section explains the rules for command syntax and arguments, then gives individual explanations for each command. Some of these commands can be executed via mouse control. For detail on using the mouse, see the section titled **Mouse Operation** on page 56.

Command Syntax

A command-line command is a line of ASCII text that is entered via the computer keyboard. Press <CR> to terminate each line, activating the command. The typical command syntax is:

> <command> [<argument>]...

Where:

>	The command prompt. The system displays this
	prompt in the debug F10 window when ready for
	another command.
<command/>	A command name in upper- or lower-case letters.
	Refer to Table 14 for command choices.
<argument></argument>	One or more arguments. Table 13 explains the many
	kinds of possible arguments.

In command syntax descriptions, brackets ([]) enclose optional items, a vertical line (]) means *or*, and an ellipsis (...) means the preceding item can be repeated. Except where otherwise noted, numerical values in examples are hexadecimal.

MMDS0508OM/D

102

Argument Type	Syntax Indicators	Explanation
Numeric	<n>, <count>, <data></data></count></n>	Hexadecimal values, unless otherwise noted. Leading zeros can be omitted. For decimal values, use the prefix ! or the suffix T . For binary values, use the prefix % or the suffix Q . Example: 54 = !100 = 100T = %1100100 = 1100100Q
Address	<address></address>	Four or fewer hexadecimal digits (leading zeros can be omitted). If an address is decimal or binary, use a prefix or suffix per the explanation of numeric arguments.
Range	<range></range>	A range of addresses or numbers. Specify the low value, then the high value, separated by a space. Leading zeros can be omitted.
Symbol	<symbol>, <label></label></symbol>	Symbols of ASCII characters, usually symbols from source code
Filename	<filename></filename>	The name of a file in DOS format; eight or fewer ASCII characters. An optional extension (three or fewer characters) can be included after a period. If the file is not in the current directory, precede the file name with a complete path.
Frequency	<rate></rate>	Decimal values that specify clock speeds
Commands	<commands></commands>	Items from the command set may be used as an argument for the HELP command.
Operator	<op></op>	+ (add); - (subtract); * (multiply); or / (divide)
Source	<source/>	The source for possible clock sources used in the MMDS
Туре	<type></type>	Specifies byte, word, or string data operations
Text	<text></text>	The text entered will be displayed when command is executed.
Termination	<terminator></terminator>	The terminator controls command flow in the memory modify command.

Table 13. Argument Types

Command Explanations

Table 14 lists the command-line commands. Individual explanations ofeach of these commands follow the table. Note that the command parserof the MMDS host software is not case sensitive.

MMDS0508OM/D

MOTOROLA

Command-Line Commands For More Information On This Product, Go to: www.freescale.com

Table 14. Command Sumary

Mnemonic	Description
A	Set accumulator
ACC	Set accumulator
ARM	Arm Bus State Analyzer
ASM	Assemble Instruction
BAUD	Set Communications Baud Rate
BAUDCHK	Baud Rate Check
BELL	Sound Bell
BF	Block Fill
BR	Set Instruction Breakpoint
BSAMODE	Sets BSA Display Mode
BSATT	Sets BSA Timetag Mode
С	Set/Clear C Bit
CCR	Set Condition Code Register
CHIPINFO	Chip Help Information
CLEARMAP	Remove Symbols
COLORS	Set Screen Colors
DARM	Disarm Bus State Analyzer
DASM	Disassemble Instructions
ENDBSA	Go to Trace Buffer End
EVAL	Evaluate Argument
EXIT	Terminate Host Session
G	Begin Program Execution
GETBSA	Upload Trace Buffer
GO	Begin Program Execution
GOTIL	Execute Program until Address
Н	Set/Clear H Bit
HELP	Display Help Information
HOMEBSA	Go to Trace Buffer Start
HREG*	Set H Register

Table 14. Command Sumary (Continued)

Mnemonic	Description
HX*	Set HX index register
I	Set/Clear I Bit
INFO	Display Line Information
LF	Log File
LOAD	Load S19 File
LOADMAP	Load Symbols
LOADMEM	Load Personality File
LOADTRIGGERS	Load Bus State Analyzer Setup
MD	Memory Display
MM	Memory Modify
N	Set/Clear N Bit
NEXTA	Go to Next A Event
NEXTB	Go to Next B Event
NEXTC	Go to Next C Event
NEXTD	Go to Next D Event
NEXTE	Go to Next Event
NOBR	Clear Breakpoints
OSC	Select Emulator Clock Frequency
PC	Set Program Counter
QUIT	Terminate Host Session
REG	Display Registers
REM	Add Comment to Script File
RESET	Reset Emulation MCU
RESETGO	Reset and Restart MCU
RESETIN	Reset Input Enable
RESETOUT	Reset Output Enable
RTMEM	Set Real-Time Memory Block
RTVAR	Display Real-Time Variable

* MMDS08 Only

	,
Mnemonic	Description
SCREENBSA	Log Bus State Analyzer Screen
SCRIPT	Execute Script File
SETMEM	Customize Memory Map
SHELL	Access DOS
SHOWBSA	Logs and Displays Bus State Analyzer
SHOWMEM	Display Memory Map
SHOWTRIGGER	Print Trigger
SNAPSHOT	Save Screen
SOURCE	Source Window Display
ST	Single Step (Trace)
STACK	Display Stack
STEP	Single Step (Trace)
STEPFOR	Step Forever
STEPTIL	Single Step to Address
STOP	Stop Program Execution
SXB	Set Multiplexer

Table 14. Command Sumary (Continued)

Table 14. Command Sumary (Continued)

Mnemonic	Description
SYSINFO	System Information
т	Single Step (Trace)
TIMETAG	Timetag Clock Source
V*	Set/Clear V Bit
VAR	Display Variable
VER	Display Version
VERSION	Display Version
VF	View a File
WAIT	Pause between Commands
WAIT4RESET	Wait for Target Reset
WHEREIS	Display Symbol Value
х	Set X Index Register
XREG	Set X Index Register
Z	Set/Clear Z Bit
ZOOM	Resize Source Window

* MMDS08 Only

Command-Line Commands

A Set Accumulator A

The A command sets the accumulator to a specified value. (The A and ACC commands are identical.)

Syntax:

A <*n*>

Where:

<*n*> The value to be loaded into the accumulator.

Example:

>A 10 Set the accumulator to 10.

Command-Line Commands Command Explanations



Set Accumulator



The ACC command sets the accumulator to a specified value. The ACC and A commands are identical.

Syntax:

ACC <*n*>

Where:

<n> The value to be loaded into the accumulator

Example:

>ACC 20 Set the accumulator to 20.

Command-Line Commands

<u>ARM</u>

Arm Bus State Analyzer



The ARM command arms the bus state analyzer. When armed, the analyzer records bus cycles while the emulator is executing user code. Arming the analyzer clears the current contents of the analyzer trace buffer. The word armed appears in the status area of the debug screen.

Syntax:

ARM

Example:

>ARM Arm the bus state analyzer for user code bus cycles.

MMDS0508OM/D

MOTOROLA
ASM

Assemble Instructions



The ASM command assembles M68HC05 Family or M68HC08 Family instruction mnemonics and places the resulting machine code into memory at a specified address.

The command displays the specified address, its contents, and a prompt for an instruction. As each instruction is entered, the command assembles the instruction, stores and displays the resulting machine code, and displays the contents of the next memory location with a prompt for another instruction. To terminate the command, enter a period (.).

Syntax:

ASM [<address>]

Where:

<address > An address at which the assembler places the first machine code generated. If <address> is not specified, the system checks the address used by the previous ASM command, then uses the following address for this ASM command.

Examples:

The first example shows the ASM command with an address argument:

>asm 100 01009D NOP>CLRA 01004F CLRA 01019D NOP>.

The second example shows the ASM command with no argument:

```
>ASM
01019D NOP>STA 0A
0101B70ASTA0A
01039D NOP>.
```

NOTE: Changes made to code via this command cannot be saved to an S-record file or to a source code file. This command should be used only to create and modify code to be run during the current debug session.

BAUD

Set Communications Baud Rate

The BAUD command changes the baud rate for communications between the system controller and the host computer. For best performance of the system, communications should be at the maximum available baud rate. Reduce this rate if the software displays communications error messages. Entering this command without a rate argument calls up the baud rate window. A baud rate can be selected via this window.

Syntax:

BAUD [<rate>]

Where:

<*rate>* One of these decimal baud-rate values: 2400 4800 9600 19,200 38,400 57,600

Example:

>BAUD 9600 Change the communications baud rate to 9600.

NOTE: To specify a default baud rate of 9600, add the –B option when first running the MMDS command.

NOTE: At power-up, MMDS software automatically sets the maximum baud rate for the system. If the baud rate is reduced but communication errors persist, turn off the disk cache (for instance, SMARTDRV.EXE).

Command-Line Commands Command Explanations

BAUDCHK

Baud Rate Check

BAUDCHK

The BAUDCHK command sets the communication rate between the host software and the MMDS system. The command first checks communication at the maximum possible rate of 57600 baud and successively lowers the rate until communication with the MMDS is established.

Syntax:

BAUDCHK

Example:

>BAUDCHK

57600 baud communicates well

The command displays a message indicating the maximum available baud rate.

MMDS0508OM/D

Command-Line Commands

Command-Line Commands

BELL	Sound Bell	BELL	
	The BELL command sounds the computer bell the specified <i>hexadecimal</i> number of times. The bell sounds once if an argument is not entered. To turn off the bell as it is sounding, press any key.		
	Syntax:		
	BELL [< <i>n</i> >]		
	Where:		
	<n> The hexadecimal number of times to</n>	o sound the bell	
	Examples:		
	>BELL Sound the bell once.		
	>BELL C Sound the bell 12 (decimal) times.		

>BELL 12 Sound the bell 18 (decimal) times.

MMDS0508OM/D

3F	Block Fill		BF
	The BF comma If the system ca locations, it will	and fills a bloo annot verify a stop comma	ck of memory with a specified byte or word. write to one of the designated memory nd execution and report an error condition.
	Syntax:		
	BF[.< <i>type</i> >	>] < <i>range</i> > </th <th>1></th>	1>
	Where:		
	<type></type>	Size of < <i>n</i> > B W	 <n> is an 8-bit value (the default)</n> <n> is a 16-bit value</n>
	<range></range>	A block (rar and ending	nge) of memory defined by beginning addresses.
	<n></n>	A value to b specified ble value, then specified to value and is	be stored in a byte or word of the bock. If <i><type></type></i> is specified to be a byte <i><n></n></i> is an 8-bit value. If <i><type></type></i> is be a word value, then <i><n></n></i> is a 16-bit s stored in each word of the block.
	Examples:		
	>BF 200 2	0F FF	Store FF hexadecimal in bytes at addresses 200 to 20F.
	>BF.W 10	0 11F 4143	Store 4143 in words at addresses 100 to 11F.

BR

Set Instruction Breakpoint	

The BR command sets an instruction breakpoint at a specified address or range of addresses. If a map file has been loaded, symbols (or labels) from the source code can be used as arguments. The maximum number of all instruction breakpoints is 64. For a list of all active breakpoints, enter this command without any parameter value.

A breakpoint occurs only on an address that contains an opcode (that is, an instruction fetch address). Although this command sets breakpoints at each address of a range, breakpoints occur only at the opcode addresses within the range. The system displays an error message if the address is within the range defined by a previous BR command or if the range of a new BR command overlaps the range of an existing BR command. An error message also appears if setting a 65th breakpoint is attempted.

Syntax:

BR [<address>|<range>|<symbol>]

Where:

<address> The address for a breakpoint

<range> The range of addresses for breakpoints; a beginning address and an ending address, separated by a space.

<symbol> The label of an instruction in source code.

Examples:

>BR 100	Set a breakpoint at address 100.
>BR 130 13F	Set 16 breakpoints at addresses 130 through 13F.
>BR START	Set a breakpoint at address label START in code.
>BR 1000 103F	Set 64 breakpoints at addresses 1000 through 103F. Note that trying to set additional breakpoints, without clearing some of these breakpoints, would bring up the error message: Too many breakpoints

Command-Line Commands Command Explanations

BSAMODE

BSA Display Mode

BSAMODE

The BSAMODE command sets the bus state analyzer display mode to raw, instruction, mixed, or source. This command is equivalent to the BSA data screen F4 key.

Syntax:

Display BSA <n>

Where:

<n></n>	One of the following decimal values:
1	Raw
2	Instruction
3	Mixed Raw and Instruction
4	Source
Example:	

>C 0 Clear the C bit of the CCR.

BSATT	BSA Timetag Mode	BSATT

This command sets the bus state analyzer timetag mode to absolute, relative, none, or cycles. This command is equivalent to the BSA data screen F8 key.

Syntax:

BSA TT <*n*>

Where:

<n></n>	One of the following decimal values:
1	Absolute
2	Relative
3	None
4	Cycles
Example:	

>C 0 Clear the C bit of the CCR.

Set/Clear C Bit

The C command sets the C bit of the condition code register (CCR) to the specified value.

NOTE: The CCR bit designators are located at the lower right of the CPU window. The CCR pattern is V11HINZC (V is two's complement overflow for M68HC08 MCU only and is 1 for M68HC05 MCU, H is half-carry, I is IRQ interrupt mask, N is negative, Z is zero, and C is carry). A letter in these designators means that the corresponding bit of the CCR is set; a period means that the corresponding bit is clear.

Syntax:

Where:

0	Clears the C bit
1	Sets the C bit
Example:	

>C 0 Clear the C bit of the CCR.

С

Command-Line Commands

CCR		Set Co	ondition Code Register	CCR
		The CCR com specified hexa	mand sets the condition code register (CC <i>decimal</i> value.	CR) to the
	NOTE: The CCR bit designators are located at the lower right of the CPU window. The CCR pattern is V11HINZC (V is two's complement over for M68HC08 MCU only and is 1 for M68HC05 MCU, H is half-carry IRQ interrupt mask, N is negative, Z is zero, and C is carry). A letter these designators means that the corresponding bit of the CCR is s period means that the corresponding bit is clear.		f the CPU ement overflow s half-carry, I is rry). A letter in e CCR is set; a	
		Syntax:		
		CCR < <i>n</i> >		
		Where:		
		< <i>n</i> >	The new hexadecimal value for the CCF	२
		Example:		
		>CCR E4	Set the CCR to E4 (N bit set, others clea	ar).

MMDS0508OM/D

Command-Line Commands Command Explanations

CHIPINFO

Chip Help Information

CHIPINFO

The CHIPINFO command accesses register, memory-map, vector, and pin-out information about the emulation MCU. Entering this command brings up the topics window as shown in **Figure 17**. Select a topic to bring up a subordinate window. (To select a topic, click on it; alternatively, highlight the topic, then press <CR>.)

The subordinate windows and their contents are:

- REGISTERS Register addresses of the MCU being emulated. Selecting an address opens another subordinate window that displays each bit of the register.
- **MEMORY MAP** The memory map for the MCU being emulated.
- **VECTORS** The vectors for the MCU being emulated.
- **PIN OUT** The pin outs for the MCU being emulated.

Topics	
REGISTERS	
MEMORY MAP	
VECTORS	
PIN OUT	

Figure 17. Topics Window

Syntax:

CHIPINFO

Example:

>CHIPINFO Access emulation MCU information.

CLEARMAP

Remove Symbols



The CLEARMAP command removes the symbol definitions in the host computer. If a map file is loaded, symbols (or labels) from the source code can be used as arguments for many other commands.

Syntax:

CLEARMAP

Example:

>CLEARMAP Clear symbols and their address definitions.

MMDS0508OM/D

Command-Line Commands Command Explanations

CC	DLO	RS

Set Screen Colors

COLORS

The COLORS command sets the screen colors. Entering this command brings up the colors window. This window includes a list of screen elements and a matrix of foreground/background color combinations; each color combination has a 2-digit hexadecimal number.

A prompt asks for the color of the first screen element. To accept the current color, press <CR>. To change the color, enter the number of the choice, then press <CR>. A new prompt asks for the color of the next element. Select the color for each element in the same way. The command ends when a color for the last screen element is selected or when ESC is pressed.

In the color matrix, rows correspond to background colors and columns correspond to foreground colors. This means that color choices from the same row result in differently colored letters and numbers against the same background color. Making the background of highlights and help screens a different color sets these elements off from the main screen.

The software stores color selections in file COLORS.05 or COLORS.08; when MMDS is executed again, the software applies the newly selected colors.

NOTE: Delete the COLORS.05 or COLORS.08 file from the MMDS subdirectory to return to the default colors.

Syntax:

COLORS

DARM

Disarm Bus State Analyzer



The DARM command disarms the bus state analyzer. When disarmed, the analyzer does not record bus cycles. The word Disarmed appears in the status area of the debug screen. (If the bus state analyzer is already disarmed, this command does nothing.)

Syntax:

DARM

Example:

>DARM Disarm the bus state analyzer.

MMDS0508OM/D

D	A	S	N	1
				_

Disassemble Instructions



The DASM command disassembles three or more machine instructions, displaying the addresses and the contents as disassembled instructions. Disassembly begins at the specified address. The valid address range is \$0000 to \$FFFF.

Syntax:

DASM <address1> [<address2>]

Where:

<address1></address1>	The starting address for disassembly. <i>Address1></i> must be an instruction opcode. If only an <i>address1></i> value is entered, the system disassembles three instructions.
<address2></address2>	The ending address for disassembly. If an <i><address2></address2></i> value is entered, disassembly begins at <i><address1></address1></i> and continues through <i><address2></address2></i> . The screen scrolls upward as addresses and their contents are displayed, leaving the last instructions in the range displayed in the window.

Example: Disassemble and display three instructions beginning at address 100:

>DASM 10	0	
0100	A6E8	LDA #0E8
0102	B702	STA 0002
0104	4F	CLRA

NOTE: For a range larger than three commands, log files can be used to store DASM responses to a file.

Command-Line Commands

ENDBSA

Go to Trace Buffer End



The ENDBSA command sets the trace buffer pointer to the last record of trace data. This command requires an open log file and loaded uploaded trace buffer data. Subsequent execution of the SCREENBSA command logs the last 20 records of analyzer data to the open log file.

Syntax:

ENDBSA

Example:

>LF < <i>filename</i> >	Open a log file.
>GETBSA	Upload captured analyzer.
>ENDBSA	Position trace buffer pointer to last record.
>SCREENBSA	Log first 20 records to open log file.

MMDS0508OM/D

<u>EVAL</u>

Evaluate Argument



The EVAL command performs mathematical operations on two numerical arguments. It displays the value of the result in hexadecimal, decimal, octal, and binary formats denoted by the suffixes H, T, O, and Q. (Note that octal numbers are not valid as operand values. Operand values are 15 bits or less.) If the value is equivalent to an ASCII character, the ASCII character is also displayed. This command supports addition (+), subtraction (–), multiplication (*) and division (/).

Syntax:

EVAL <n1> <op> <n2>

Where:

<n1></n1>	A number to be evaluated or the first operand of a simple expression to be evaluated
< <i>op></i>	The arithmetic operator $(+, -, *, \text{ or }/)$ of a simple expression to be evaluated
<n2></n2>	The second operand of a simple expression to be evaluated

Example: Evaluate the sum of hexadecimal numbers 45 and 32 then display the result in four bases and as an ASCII character:

>EVAL 45 + 32

0077H 119T 000157O 000000001110111Q "w"

NOTE: The host will not inform of an operation that resulted in an overflow. Also, the result of a division operation will be the quotient.

EXIT	I

Terminate Host Session



The EXIT command terminates the host session and returns to DOS. The EXIT and QUIT commands are identical. Another way to end a host session is to enter the ALT-X keyboard combination.

Syntax:

EXIT

Example:

>EXIT Return to DOS.

MMDS0508OM/D

Begin Program Execution

The G command starts execution of code in the emulator at the current address or at a specified address. If one address is entered, it is the starting address. If two addresses are entered, execution begins at the first and stops at the second. If a map file has been loaded, symbols (or labels) from the source code can be used as arguments. The G and GO commands are identical.

If no address or only one address is specified, execution continues until a STOP command is entered, a breakpoint occurs, or an error occurs.

Syntax:

G [<address1>|<symbol>] [<address2>|<symbol>]

Where:

<address1></address1>	Execution starting address. If an <i><address1></address1></i> value is entered, the system loads the value into the program counter (PC), then starts execution at the address in the PC. If an <i><address1></address1></i> value is not entered, execution begins at the address already in the PC.
<address2></address2>	Execution stop address. The <i><address2></address2></i> value must be an instruction fetch address; if it is not, code execution continues as if the command had no <i><address2></address2></i> value.

- *<symbol>* The label of an instruction in source code.
- **NOTE:** Be careful about using the G, GO, or GOTIL commands if the code branches into internal RAM (for instance, option RAM) or EEPROM. An execution stop address is invalid for internal locations.

Examples:

>G	Begin code execution at the current PC value.
>G 145	Begin code execution at address 145.
>G START	Begin code execution at label START in source
code.	
>G 200 271	Begin code execution at address 200. End code execution just before the instruction at address 271

MMDS0508OM/D

Semiconductor, Inc.

reescale

G

Command-Line Commands

GETBSA

Upload Trace Buffer



The GETBSA command uploads the contents of the bus state analyzer trace buffer to the host computer. This is convenient when using a script file in conjunction with the bus state analyzer. Alternatively, the trace buffer data can be retrieved and displayed using the F4 function key.

Syntax:

GETBSA

Example:

>GETBSA Upload trace buffer contents to the host computer.

MMDS0508OM/D

Begin Program Execution



The GO command starts execution of code in the emulator at the current address or at a specified address. If one address is entered, it is the starting address. If two addresses are entered, execution begins at the first and stops at the second. If a map file has been loaded, symbols (or labels) from the source code can be used as arguments. The GO and G commands are identical.

If no address or only one address is specified, execution continues until a STOP command is entered, a breakpoint occurs, or an error occurs.

Syntax:

GO [<address1>|<symbol>] [<address2>|<symbol>]

Where:

<address1></address1>	Execution starting address. If an <i><address1></address1></i> value is entered, the system loads the value into the program counter (PC), then starts execution at the address in the PC. If an <i><address1></address1></i> value is not entered, execution begins at the address already in the PC.
<address2></address2>	Execution stop address. The <i><address2< i="">> value must be an instruction fetch address; if it is not, code execution continues as if the command had no <i><address2< i="">> value.</address2<></i></address2<></i>
<svmbol></svmbol>	The label of an instruction in source code.

NOTE: Be careful about using the G, GO, or GOTIL commands if the code branches into internal RAM (for instance, option RAM) or EEPROM. An execution stop address is invalid for internal locations.

Examples:

>GO	Begin code execution at the current PC value.
>GO 145	Begin code execution at address 145.
>GO START	Begin code execution at label START in source
code.	
>GO 200 271	Begin code execution at address 200. End code execution just before the instruction at address
271.	-

<u>GOTIL</u>

The GOTIL command executes the program in the emulator, beginning at the address in the program counter (PC). Execution continues until the program counter contains the specified address during an opcode fetch cycle. If a map file has been loaded, symbols (or labels) from the source code can be used as arguments.

Syntax:

GOTIL <address> | <symbol>

Where:

<address></address>	Execution stop address. The <i><address< i=""> value must be an instruction fetch address: if it is not.</address<></i>
	code execution continues as if the command had no <i>address</i> > value.

- *<symbol>* The label of an instruction in source code.
- **NOTE:** Be careful about using the G, GO, or GOTIL commands if the code branches into internal RAM (for instance, option RAM) or EEPROM. An execution stop address is invalid for internal locations.

Example:

>GOTIL 0FF0 Execute the program in the emulator up to address 0FF0.

MMDS0508OM/D

Н

Set/Clear H Bit The H command sets the H bit of the condition code register (CCR) to the specified value. NOTE: The CCR bit designators are at the lower right of the CPU window. The CCR pattern is V11HINZC (V is two's complement overflow for M68HC08 MCU only and is 1 for M68HC05 MCU, H is half-carry, I is IRQ interrupt mask, N is negative, Z is zero, and C is carry). A letter in these designators means that the corresponding bit of the CCR is set; a period means that the corresponding bit is clear. Syntax: H 0|1 Where:

Clears the H bit

Sets the H bit

Set the H bit of the CCR.

0

1

Example:

>H 1

н

HELP	Display Help Information	HELP

The HELP command displays a list of help topics such as commands and function keys.

If commands are selected, the software displays an alphabetic index of the command set from which a command can be selected. To select help for a command, highlight the command using the page up/down keys and the arrow keys, then press <CR>. The command description screen shows the command name and its syntax and describes the command. When appropriate, the description includes examples and clarifying notes.

Selecting key commands brings up a list of screens in which function-key assignments differ. Select a screen to see its function-key assignments.

Use the arrow keys to scroll within the page; use the page up and page down keys to see other pages.

To exit the HELP data base and return to the previous screen, press the ESC key.

Syntax:

HELP [<command>]

Where:

<command> Name of a command for which a description is needed

Examples:

>HELP	Display the HELP screens.	
-------	---------------------------	--

>HELP ASM Display the description of the ASM command.

Related key command:

Pressing <F1> pulls up the main help window.

MMDS0508OM/D

132

Command-Line Commands Command Explanations

HOMEBSA

Go to Trace Buffer Start



The HOMEBSA command sets the trace buffer pointer to the first record of trace data. This command requires an open log file and loaded uploaded trace buffer data. Subsequent execution of the SCREENBSA command logs the first 20 records of analyzer data to the open log file.

Syntax:

HOMEBSA

Example:

>LF <i><filename< i="">></filename<></i>	Open a log file.
>GETBSA	Upload captured analyzer.
>HOMEBSA	Position trace buffer pointer to first record.
>SCREENBSA	Log first 20 records to open log file.

Freescale Semiconductor, Inc.

Command-Line Commands

HREG	Set H Register	HREG
NOTE:	This command is for the MMDS08 only.	
	The HREG command sets the upper byte of the inde	ex register to the
	Syntax:	
	HREG <n></n>	
	Where:	
	<n> The new value for the H register</n>	
	Example:	
	>HREG F0 Set the H register value to F0.	

Freescale Semiconductor, Inc.

HX		Set I	H:X Index Register HX	K
	NOTE:	This command is	s for the MMDS08 only.	
		The HX commar (H:X) to the spec	nd sets both bytes of the concatenated index register cified value.	
		Syntax:		
		HX <i><n></n></i>		
		Where:		
		<n></n>	The new value for the H:X register	
		Example:		
		>HX 0400	Set the H:X index register to \$400.	

Set/Clear I Bit

The I command sets the I bit in the condition code register (CCR) to the specified value.

NOTE: The CCR bit designators are at the lower right of the CPU window. The CCR pattern is V11HINZC (V is two's complement overflow for M68HC08 MCU only and is 1 for M68HC05 MCU, H is half-carry, I is IRQ interrupt mask, N is negative, Z is zero, and C is carry). A letter in these designators means that the corresponding bit of the CCR is set; a period means that the corresponding bit is clear.

Syntax:

101

Where:

0	Clears the I bit
1	Sets the I bit
Example:	

>I 1 Set the I bit of the CCR.

MMDS0508OM/D

Command-Line Commands Command Explanations

<u>INFO</u>

Display Line Information

INFO

The INFO command displays information about the highlighted line in the source window. This information includes the name of the file being displayed in the window, the line number, address, corresponding object code, and the disassembled instruction.

Syntax:

INFO

Example:

>INFO						
Filename	:	05TEST	CO.ASM	Line number	:	!117
Address	:	\$0100				
Disassembly	:	0100	99	SEC		

If a map file is loaded and the highlighted instruction has a label, the label will be displayed in the disassembly line in place of the address.

Example:

:	05TESTCC	D.ASM	Line number:	!117
:	\$0100			
:	START	99	SEC	
	: : :	: 05TESTCC : \$0100 : START	: 05TESTCO.ASM : \$0100 : START 99	: 05TESTCO.ASM Line number : : \$0100 : START 99 SEC

Command-Line Commands

LF

Log File

The LF command starts or stops logging of commands and responses to an external file. If logging is not enabled, enter this command to start logging. While logging remains in effect, any line that is appended to the command log window also is written to the log file. Logging continues until another LF command is entered; this second command disables logging and closes the log file.

If the specified file does not already exist, this command creates the file. If the specified file does exist already, the command prompts for overwrite or append:

File exists, Rewrite or Append? [R]:

If <CR> (accept the default) is pressed, or R and <CR>, the log entries overwrite the data in the existing file. If A and <CR> are pressed, the system appends log entries to the file.

Syntax:

LF <filename>

Where:

<filename></filename>	The DOS filename of the log file; the command interpreter does not assume a filename extension.
Examples:	
>LF log file	Start logging. Write to file log file (in the current directory) all lines added to the command log window.
>LF	If logging is enabled: Disable logging and close the log file.

MMDS0508OM/D

LF

Command-Line Commands Command Explanations

Load S19 File



The LOAD command loads a file in .S19 format (and any map file with the same name) into the emulator. If no argument is supplied, the command pops up a file select window.

Syntax:

LOAD [<filename>]

Where:

<filename></filename>	The na extens omitte files w followe can be display specifi extens	ame of the S-record file to be loaded. An sion of .S19 is the default and can be d. The extension must be specified for rith other extensions. A path name ed by the asterisk (*) wildcard character e entered. In that case, the command ys a window that lists the files in the ied directory that have the .S19 sion.
Examples:		
>LOAD PROG1.S19		Load file PROG1.S19 and its map file into the emulator at the load addresses in the file.
>LOAD PROG2		Load file PROG2.S19 and its map file into the emulator at the load addresses in the file.
>LOAD A:*		Display the names of the .S19 files on the diskette in drive A: for user selection of a file.

LOADMAP

Load Symbols



The LOADMAP command loads a map file that contains symbol information from source code. If no argument is supplied, the command pops up a file select window.

Syntax:

LOADMAP [<filename>]

Where:

<filename> T e c f f f c c c c c c c c c c c c c c c</filename>	The name of the map file to be loaded. An extension of .MAP is the default and can be omitted. The extension must be specified for iles with other extensions. A pathname ollowed by the asterisk (*) wildcard character can be entered. In that case, the command displays a window that lists the files in the specified directory that have the .MAP extension.
---	--

Examples:

>LOADMAP PROG1.MAP	Load map file PROG1.MAP into the host computer.
>LOADMAP PROG2	Load map file PROG2.MAP into the host computer.
>LOADMAP A:*	Display the names of the .MAP files on the diskette in drive A:, for user selection of a file.

MMDS0508OM/D

Semiconductor, Inc.

Freescale

Command-Line Commands Command Explanations

LOADMEM

Load Personality File



Personality files are used to customize the emulation memory map for a specific microcontroller device. A personality file to be loaded could have been shipped with an emulation module (EM) or could have been created by pressing the F6 key in the SETMEM window.

The LOADMEM command loads the memory map for the emulator with the map information from the specified file.

Syntax:

LOADMEM [<filename>]

Where:

<filename> The name of the memory-mapping file to be loaded. An extension of .MEM is the default and can be omitted. If a pathname followed by the asterisk (*) wildcard character is entered, the command displays a window that lists the files in the specified directory that have the .MEM extension. If a .MEM file is selected that is not appropriate for the current EM installed, an error will be generated.

Examples:

>LOADMEM 000P4V01.MEM	Make 000P4V01.MEM the current memory-mapping file.
>LOADMEM 003FEV01.MEM	Make 003FEV01.MEM the current memory-mapping file.
>LOADMEM A:*	Display the names of the .MEM files on the diskette in drive A:, for user selection of a file.

Freescale Semiconductor, Inc

Command-Line Commands

LOADTRIGGERS	Load Bus State Analyzer Setup	LOADTRIGGERS
--------------	-------------------------------	--------------

The LOADTRIGGERS command loads the bus state analyzer setup information from the specified file. To write such a file, use the bus state analyzer setup screen to define the triggers, then press the F6 key.

Syntax:

LOADTRIGGERS [<filename>]

where:

<filename> The name of the setup file to be loaded. An extension of .SET is the default and can be omitted. The extension must be specified for files with other extensions. You can enter a pathname followed by the asterisk (*) wildcard character. In that case, the command displays a window that lists the files in the specified directory that have the .SET extension.

Examples:

>LOADTRIGGERS BSA.SET	Make BSA.SET the current BSA setup file.
>LOADTRIGGERS BSA8	Make BSA8.SET the current BSA setup file.
>LOADTRIGGERS A:*	Display the names of the .SET files on the diskette in drive A:, for user selection of a file.

MMDS0508OM/D

MD

Memory Display



The MD command displays (in the memory F3 window) the contents of 32 emulation memory locations. The specified address is the first of the 32 locations. If a log file is open, this command also writes the first 16 values to the log file.

Syntax:

MD <address>

Where:

<address></address>	The starting memory address for display in the memory window
mple:	
>MD 1000	Display the contents of 32 bytes of memory beginning at address 1000.

Exar

Command-Line Commands

Memory Modify

The MM command lets the user interactively examine and modify contents of memory locations. Writes to memory are verified and a "write did not verify" is displayed if the write could not be verified. Note that this message may be acceptable in some situations, such as writing to registers that have write-only bits.

If any data arguments are entered with this command, the system stores the values, beginning at the specified address. This command does not alter the contents of CPU registers such as the program counter (PC).

Syntax:

MM <address> [<data>] [<data>]

Where:

<address></address>	The address of a memory location to be modified
<data></data>	The value(s) to be stored at the <i><address></address></i> location. If more than one data byte is supplied, the two data bytes are stored in consecutive memory locations starting at the address argument.

If *<data>* is not supplied, the command flow will display the current contents of the specified address and an entry prompt for data. The syntax for entry at the MM data prompt is:

[<data>][<terminator>]

Semiconductor, Inc.

reescale

MMDS0508OM/D
Command-Line Commands Command Explanations

MM		Memory Modify MM		MM
	Where:			
	<data< td=""><td>\geq</td><td>The value to be stored at the <<i>address</i> argument.</td><td>></td></data<>	\geq	The value to be stored at the < <i>address</i> argument.	>
	<term< td=""><td>ninator></td><td>The command terminator character co the next step in the command flow. The choices are:</td><td>ntrols e four</td></term<>	ninator>	The command terminator character co the next step in the command flow. The choices are:	ntrols e four
	a.	lf no < <i>tei</i> forward.	<i>rminator</i> > is supplied, address flow will se	quence
	b.	lf the equ current a	ual (=) character is entered, flow will stay address.	at the
	c.	lf the car backwar	at (^) character is entered, flow will sequent of the previous address.	ence
	d.	If the per return to	riod (.) character is entered, flow will term the command line prompt.	inate and
	Examples:	1		
	The first ex permitting period inst	xample d entry of ead of a	loes not have a < <i>data</i> > value in the comr new values for consecutive addresses. E new value stops the command:	nand line, ntering a
	>MM	1000		
	1000	= 0F >05	5	
	1001	= 10 >.		
	The secon only one m	d examp nemory lo	le includes a < <i>data</i> > value, so the comma ocation:	nd modifies

>MM 100 00

Command-Line Commands

<u>N</u>		Set/Clear N Bit
	The N comman the specified v	nd sets the N bit of the condition code register (CCR) to alue.
NOTE:	The CCR bit d CCR pattern is M68HC08 MC interrupt mask designators me means that the	esignators are at the lower right of the CPU window. The V11HINZC (V is two's complement overflow for U only and is 1 for M68HC05 MCU, H is half-carry, I is IRQ N is negative, Z is zero, and C is carry). A letter in these eans that the corresponding bit of the CCR is set; a period corresponding bit is clear.
	Syntax:	
	N 0 1	
	Where:	
	0	Clears the N bit
	1	Sets the N bit
	Example:	
	>N 1	Set the N bit of the CCR.

MMDS0508OM/D

Command-Line Commands Command Explanations

NEXTA

Go to Next A Event



The NEXTA command displays the next occurrence of an A event in the debug window. If a log file is open, this command also writes that frame to the log file. If the NEXTA event cannot be found, the last captured event in the trace buffer is displayed.

Syntax:

NEXTA

Example:

>NEXTA Scroll the bus state analyzer display to the next A event.

Related Key Command:

Alt-A while in the bus state analyzer data window.

NEXTB

Go to Next B Event



The NEXTB command displays the next occurrence of a B event in the debug window. If a log file is open, this command also writes that frame to the log file. If the NEXTB event cannot be found, the last captured event in the trace buffer is displayed.

Syntax:

NEXTB

Example:

>NEXTB Scroll the bus state analyzer display to the next B event.

Related Key Command:

Alt-B while in the bus state analyzer data window.

MMDS0508OM/D

Command-Line Commands Command Explanations

NEXTC

Go to Next C Event



The NEXTC command displays the next occurrence of a C event in the debug window. If a log file is open, this command also writes that frame to the log file. If the NEXTC event cannot be found, the last captured event in the trace buffer is displayed.

Syntax:

NEXTC

Example:

>NEXTC Scroll the bus state analyzer display to the next C event.

Related Key Command:

Alt-C while in the bus state analyzer data window.

MMDS0508OM/D

Go to: www.freescale.com

NEXTD

Go to Next D Event



The NEXTD command displays the next occurrence of a D event in the debug window. If a log file is open, this command also writes that frame to the log file. If the NEXTD event cannot be found, the last captured event in the trace buffer is displayed.

Syntax:

NEXTD

Example:

>NEXTD Scroll the bus state analyzer display to the next D event.

Related Key Command:

Alt-D while in the bus state analyzer data window.

MMDS0508OM/D

Command-Line Commands Command Explanations

NEXTE

Go to Next Event

NEXTE

The NEXTE command positions the bus state analyzer display at the next occurrence of any event. The data record is displayed in the debug window. If a log file is open, this command also writes that frame to the log file. If another event is not found, the last captured event in the trace buffer is displayed.

Syntax:

NEXTE

Example:

>NEXTE Scroll the bus state analyzer display to the next event.

Related Key Command:

Alt-E while in the bus state analyzer data window.

Command-Line Commands

<u>NOBR</u>

Clear Breakpoints

The NOBR command clears one instruction breakpoint, all instruction breakpoints, or all instruction breakpoints within an address range. If a map file has been loaded, symbols (or labels) from the source code can be used as arguments. If this command has only one argument, it clears the breakpoint at that address. If this command has no argument, it clears all current breakpoints. If this command has two address values, it clears all instruction breakpoints in the range the addresses define.

Syntax:

NOBR [<address>|<range>|<symbol>]

Where:

	<address></address>	The address of a single breakpoint to be removed
	<range></range>	The range of addresses from which all breakpoints should be removed
	<symbol></symbol>	The label of an instruction in source code.
Exa	imples:	
	>NOBR	Clear all current instruction breakpoints.
	>NOBR 120	Clear the instruction breakpoint at address 120.
	>NOBR 120 14	Clear all instruction breakpoints in the address range 120 to 140.
	>NOBR START	Clear a previously set breakpoint at address label START in source code.

Select Emulator Clock Frequency



The MMDS platform board can supply an oscillator clock source for the MCU's OSC1 input.

For the MMDS05, five clock frequencies are available. The four internally generated clock frequencies are available: 8 MHz, 4 MHz, 2 MHz, and 1 MHz and an external clock source. Entering emulator clock (OSC) command without the designated frequency brings up the temporary MMDS emulator clock frequency window near the center of the debug screen. Use the up/down arrow keys to select the emulator MCU's clock frequency and press <CR> to complete the selection. The default emulator clock rate is 2 MHz.

For the MMDS08, six clock frequencies are available. The five internally generated clock frequencies are available: 16 MHz, 8 MHz, 4 MHz, 2 MHz, and 1 MHz and an external clock source. The default emulator clock rate is 4 MHz.

Entering this command without the *<rate>* argument brings up the EM oscillator window. An oscillator frequency can be selected via this window.

NOTE: Many EMs require a specific jumper configuration in order to use this clock source. Refer to the EM user's manual for EM clock source information.

Syntax:

OSC [<rate> | <source>]

Where:

<*rate>* 8, 4, 2, or 1 <*source>* External

Examples:

>OSC 4	Use the 4-MHz internal emulator clock.
>OSC EX	Use the external emulator clock.
>OSC	Bring up the emulator clock window. The current oscillator setting will be highlighted

MMDS0508OM/D

MOTOROLA

Command-Line Commands

DSC

PC	Set Program Counter	PC

The PC command sets the program counter (PC) to the specified address.

Syntax:

PC <address>

Where:

<address> The new address value for the PC

Example:

PC 0500 Set the PC to 0500.

Command-Line Commands Command Explanations

QUIT

Terminate Host Session



The QUIT command terminates the host session and returns to DOS. The QUIT and EXIT commands are identical. Another way to end a host session is to enter the ALT-X keyboard combination.

Syntax:

QUIT

Example:

>QUIT Return to DOS.

MMDS0508OM/D

Command-Line Commands

REG

Display Registers

The REG command displays the contents of the CPU registers in the debug F10 window. The command also will display the instruction pointed to by the current program counter value.

Syntax:

REG

Example:

>REG PC:1196 A:00 X:90 SP:FF CCR:FA [BRCLR 1,0003,119C]

MMDS0508OM/D

<u>REM</u>

Add Comment to Script File



The REM command adds a display comment to a script file. When the script file is executed, the system displays this comment.

Syntax:

REM <text>

Where:

<text> The display comment.

Example:

>REM Program executing

Display program executing only during script file execution.

RESET

Reset Emulation MCU



The RESET command resets the emulation MCU and sets the program counter to the contents of the reset vector. This command does *not* start execution of user code. To reset and execute user code, use the RESETGO or WAIT4RESET command.

Syntax:

RESET

Example:

>RESET Reset the MCU.

MMDS0508OM/D

Command-Line Commands Command Explanations

RESETGO

Reset and Restart MCU

RESETGO

The RESETGO command resets the emulation MCU, sets the program counter (PC) to the contents of the reset vector, then starts execution from that address.

Syntax:

RESETGO

Example:

>RESETGO

Reset the MCU and go.

MMDS0508OM/D

Command-Line Commands

RESETIN	Reset Input Enable	RESETIN
	The RESETIN command makes it possible for the the emulating MCU.	e target system to reset
	Entering this command toggles the MMDS state signal from the target system. If this state is enab the target system resets the emulating MCU. If the reset signal from the target system cannot reset the word Resetin appears in the debug screen status enabled state.	with regard to a reset led, a reset signal from his state is disabled, a he emulating MCU. The s area to show the
	The state must be enabled for proper operation of command.	of the WAIT4RESET
NOTE:	Certain EMs include a hardware jumper that gove a jumper must be configured correctly to use the Consult the EM user's manual for additional info	erns target resets. Such RESETIN command. rmation.

Syntax:

RESETIN

Example:

>RESETIN Toggle the MMDS RESETIN state.

MMDS0508OM/D

Command-Line Commands Command Explanations

RESETOUT

Reset Output Enable

RESETOUT

The RESETOUT command makes it possible for the MMDS RESET command to reset the target system.

Entering this command toggles the MMDS state with regard to resetting the target system. If this state is enabled, entering the RESET command resets both the emulating MCU and the target system. The word Resetout appears in the debug screen status area to show the enabled state. If this state is disabled, entering the RESET command resets only the emulating MCU.

The RESETOUT command also pertains to resets done via the RESETGO command.

NOTE: Certain EMs include a hardware jumper that governs target resets. Such a jumper must be configured correctly to use the RESETOUT command. Consult your EM user's manual for additional information.

Syntax:

RESETOUT

Example:

>RESETOUT Toggle the MMDS RESETOUT state.

<u>RTMEM</u>

Set Real-Time Memory Block

The RTMEM command enables real-time-memory, starting at a specified address. The real-time memory consists of 32 bytes of dual-ported memory that is assigned to any valid memory address by this command. While the emulator is running, the system displays enabled real-time memory in the real-time memory window (this window replaces the memory F3 window). The display updates as the memory contents change. Entering the RTMEM command without an argument disables real-time memory, restoring previous memory map attributes.

Real-time memory consists of memory enabled by the RTMEM command, plus real-time variables created via the RTVAR command. All this real-time memory must fit within a 1-Kbyte block. If an RTMEM command would result in real-time memory that would not fit within the 1-Kbyte block (due to established real-time variables), the system will not accept the RTMEM command.

If any of the real-time memory overlays MCU I/O or EEPROM addresses, it is available only for monitoring emulation MCU writes. (You should not try to modify such locations.) You can monitor and modify real-time memory locations that do not overlay MCU I/O or EEPROM addresses.

Syntax:

RTMEM [<address> | <symbol>]]

where:

<address></address>	The beginning address of the real-time-memory.
<symbol></symbol>	A symbol loaded from a .MAP file

Example:

>RTMEM 0200 Set the address of the real-time-memory to 0200 through 021F.

rtvar	Display Real-Time Variable

RTVAR

The RTVAR command displays the specified address and its contents in the variables F8 window as a real-time variable. If a MAP file is loaded, symbols from the source code can be used as arguments.

As many as 32 variables can be declared in the variables F8 window. The window shows 11 at a time. Using the RTVAR command establishes a real-time variable. The variable value will periodically be updated in the variables F8 window during emulation. You can also enter a new value for a real-time variable during emulation.

The *<type>* argument enables display of variables in byte, word, or string format. A byte display is hexadecimal and binary, a word display is hexadecimal and decimal, and a string display is ASCII.

For an ASCII string, the optional *<n>* argument specifies the number of characters; the default is the maximum 11 characters. Control and other non-printing characters appear as periods (.).

Syntax:

RTVAR[.<type>] <address>|<symbol> [<n>]

Where:

<type></type>	The variable type to display: B (byte, the default), W (word), or S (string)
<address></address>	The address of the memory variable
<n></n>	The number of characters to be displayed. Used only with the string type. If $$ is omitted, 11 ASCII characters will be visible in the window, beginning at the $$ argument location.
<symbol></symbol>	A symbol loaded from a .MAP file

Command-Line Commands

RTVAR	Di	Display Real-Time Variable		
	Examples:			
	•			
	>RTV/	AR 100	Display (in hexadecimal and bir	nary) the byte
	at			<i>,</i>
			address 100	
	>RTV/	AR.B 110) Display (in hexadecimal and bir	nary) the byte
	at			5, 5
			address 110	
	>RTV/	AR.W 10	2 Display (in hexadecimal and de	cimal) the
	word at			,
			address 102	
	>RTV/	AR.S 200) 5Display the 5-character ASCII	string starting
	at			gg
			address 200	

(The RTVAR command also establishes variables for display in the variables F8 window, but such variables are not real-time. The 32-variable maximum applies to variables established by both the RTVAR and VAR commands.)

Real-time memory consists of memory enabled by the RTMEM command, plus real-time variables created via the RTVAR command. All this real-time memory must fit within a 1-Kbyte block. If an RTVAR command would create a real-time variable that would not fit within the 1-Kbyte block (due to established real-time variables or memory enabled by the RTMEM command), the system will not accept the RTVAR command.

If any of the real-time memory overlays MCU I/O or EEPROM addresses, it is available only for monitoring emulation MCU writes. (You should not try to modify such locations.) You can monitor and modify real-time memory locations that do not overlay MCU I/O or EEPROM addresses.

Command-Line Commands Command Explanations

SCREENBSA

Log Bus State Analyzer Screen



The SCREENBSA command copies the current bus state analyzer display to an open log file.

Syntax:

SCREENBSA

Example:

>SCREENBSA Copy the bus state analyzer display to the log file.

Command-Line Commands

SCRIPT

Execute Script File

The SCRIPT command executes a script file, which contains a sequence of emulator commands. Executing the script file has the same effect as executing the individual commands one after another. This makes a script file convenient for any sequence of commands that is needed often, such as unit test or initialization command sequences.

The REM and WAIT commands are useful primarily within script files. The REM command allows a comment to be displayed while the script file executes. The WAIT command establishes a delay between the execution of commands of the script file.

NOTE: A script file can contain the SCRIPT command. Script files can be nested as many as 15 levels deep.

If the script file has the filename STARTUP.05, the script file will be executed each time the MMDS is started.

Syntax:

SCRIPT <filename>

Where:

<filename></filename>	The extension files follo car disp spece	e name of the script file to be executed. An ension of .SCR is the default and can be itted. The extension must be specified for s with other extensions. A path name owed by the asterisk (*) wildcard character be entered. In that case, the command olays a window that lists the script files in the ecified directory that have the .SCR ension. A file can be selected from the list.
Examples:		
>SCRIPT INIT.S	CR	Execute commands in file INIT.SCR.
>SCRIPT *		Display all .SCR files, then execute the selected file.
>SCRIPT A:*		Display all .SCR files in drive A, then execute the selected file.
>SCRIPT B:*.xyz	2	Display all drive B files that have the
extension		
		.xyz then execute the selected file.

Command-Line Commands Command Explanations

SETMEM

Customize Memory Map



The SETMEM command allows customizing of the memory map. Entering this command brings up the custom map window as shown in **Figure 18**. The current RAM and ROM configuration will be shown in the window. To modify the map, enter the desired address ranges.

To write the modified map to a file for future use, press Save (F6), then enter the filename at the prompt. The system saves the new .MEM file under the specified name. If a file by the specified name already exists, a notice is made with the option to overwrite. The emulator can load this file using the LOADMEM instruction at a future time.

Pressing Execute (F7) will use the newly defined memory map for the current debug session only.

Cu	stom M				
RAM0	0080	00FF			
RAM1	XXXX	XXXX			
RAM2	XXXX	XXXX			
RAM3	XXXX	XXXX			
POM0	0020	004 🕫			
	0020				
ROM1					
ROMZ	TEEO	TEEE			
ROM3	XXXX	XXXX			
Vector 1FFE					
F6:SAVE F7:EXECUTE					
<esc>:CANCEL</esc>					

Figure 18. Custom Map Window

SETMEM

Customize Memory Map

SETMEM

The SETMEM command allows mapping over undefined memory or memory defined as RAM or ROM. Do not map over such internal resources as option RAM, I/O, or EEPROM. The SETMEM command automatically maps around internal resources.

NOTE: The SETMEM command can be used to expand the normal RAM and ROM ranges temporarily during debugging. Be sure to restore the original size and configuration of the MCU memory before final debugging. Otherwise, the code could fail to fit or run in an MCU's memory space.

The SETMEM and SHOWMEM commands only show MMDS resources. That is memory that is resident on the control board during emulation. Use the CHIPINFO command memory map feature to view internal I/O, option RAM, and EEPROM locations.

Syntax:

SETMEM

MMDS0508OM/D

Command-Line Commands Command Explanations

Access DOS

SHELL

The SHELL command allows access to DOS in the host computer. To return to MMDS from DOS, enter EXIT at the DOS prompt.

MMDS continues to run during the shell to DOS. This could mean that the memory for other software is insufficient.

Syntax:

SHELL

Example:

>SHELL Access the DOS shell. To return to the emulator session, type EXIT at the DOS prompt.

MMDS0508OM/D

Command-Line Commands

Command-Line Commands

SHOWBSA

Display Trace Buffer



This command copies a specified range of the current BSA display to the debug window and an open log file.

Syntax:

SHOWBSA <range>

Where:

<range>

The range of BSA frames a beginning frame and an ending frame separated by a space.

MMDS0508OM/D

Command-Line Commands Command Explanations

SHOWMEM

Display Memory Map

SHOWMEM

The SHOWMEM command displays only the MMDS resources. That is memory that is resident on the control board during emulation. Use the CHIPINFO command memory map feature to view internal I/O, option RAM, and EEPROM locations.

Syntax:

SHOWMEM

Example:

>SHOWMEM Display current memory map blocks.

MMDS0508OM/D

Command-Line Commands

SHOWTRIGGER

Print Trigger

SHOWTRIGGER

The SHOWTRIGGER command displays the trigger frame of the bus state analyzer buffer. If a log file is open, this command also writes the trigger frame to the log file.

Syntax:

SHOWTRIGGER

Example:

>SHOWTRIGGER

Display the bus state analyzer trigger frame.

Command-Line Commands Command Explanations

SNAPSHOT

Save Screen



The SNAPSHOT command saves a copy of the main screen to the open log file. A log file must be open or this command has no effect.

NOTE: The main screen includes certain extended ASCII characters. When subsequently viewing a screen snapshot, a standard ASCII editor will display a few characters that do not match the original screen.

Syntax:

SNAPSHOT

Example:

>SNAPSHOT Capture screen, save to a log file.

SOURCE

The SOURCE command toggles between source code and disassembled code in the source/code F2 window, located at the upper right of the debug screen. On entering MMDS software, the window defaults to disassembled code, the window title is CODE F2, and window contents are a disassembled representation of MCU memory. In this object code display, the disassembled instructions change when corresponding bytes of memory change. To scroll through this window, press the F2 key (to select the window), then use the arrow keys.

The contents of the source/code F2 window change to source code when the SOURCE command is executed if:

- 1. A map file has been loaded (a map file is loaded with the S-record LOAD command) and
- 2. The program counter (PC) points to a memory area covered by the map file.

Once a .MAP file has been loaded and the PC points to an area of user code, the SOURCE command can be used to toggle between source code and object code. If a mouse is installed, the symbols that appear at the bottom of the window can be selected. Use the mouse or arrow keys to scroll through the information in the window. Note that the F2 key does not pertain to this window if it shows source code. **Table 6** lists the key commands available in this window when a source code is displayed.

NOTE: When memory data that was generated from a source file is altered, the modified code appears in the code window but not the source file window. Use the CLEARMAP command to clear the source file from the host system.

Syntax:

SOURCE

Example:

>SOURCE window.

Toggle the display in the source/code F2

Single Step (Trace)

The ST command executes a specified *hexadecimal* number of instructions, beginning at the current program counter (PC) address value. If a number is not specified, this command executes one instruction. The ST, STEP, and T commands are identical.

Syntax:

ST [<count>]

Where:

<count> The hexadecimal number of instructions to be
executed. Hexadecimal \$7FF is the maximum
value.

NOTE: Do not use any step command (ST, STEP, STEPFOR, STEPTIL, or T) if the PC points to internal RAM or EEPROM or if the code branches into internal RAM or EEPROM.

The step commands are not real-time. They execute one instruction at a time, then return control to the monitor. Do not rely on timer values.

Examples:

- >ST Execute the instruction at the current PC address value.
- >ST 2 Execute two instructions, starting at the current PC address value.

STACK

Display Stack

The temporary stack window appears near the center of the debug screen when the STACK command is entered. As **Figure 19** shows, this window displays the contents of the SP register at the top of the window. The 12 bytes at the top of the stack are displayed to the left. The interpretation of the stack shown to the right in the window is valid only if the last push to the stack was caused by an interrupt. Press the ESC key to remove the stack window and return to the debug window.

Syntax:

STACK

Example:

- >STACK Display the current configuration of the stack.
- **NOTE:** The interrupt stack data to the right side of the window is an interpretation of the top five bytes on the stack. If the last push to the stack was due to a BSR or JSR instruction, five bytes were not pushed to the stack and the interrupt stack information is invalid.

		CTT A C	v		
Stack Pointer = 00F8					
Raw Bytes:		Inte	rupt Stack:		
• • • •	••			HINZC	
• • • •	••	CCR	>	11100101	
• • • •	••	Α	>	FF	
• • • •	••	Х	>	10	
00FF	7D	ret	>	0244	
OOFE	01				
00FD	44				
00FC	02				
00FB	10				
00FA	FF				
00F9	E5				
SP> 00F8	07				

Figure 19. Stack Window

Single Step (Trace)

STEP

The STEP command executes a specified *hexadecimal* number of instructions, beginning at the current program counter (PC) address value. If a number is not specified, this command executes one instruction. The STEP, ST, and T commands are identical.

Syntax:

STEP [<count>]

Where:

- <count> The hexadecimal number of instructions to be executed. Hexadecimal \$7FF is the maximum value.
- **NOTE:** Do not use any step command (ST, STEP, STEPFOR, STEPTIL, or T) if the PC points to internal RAM or EEPROM or if the code branches into internal RAM or EEPROM.

The step commands are not real-time. They execute one instruction at a time, then return control to the monitor. Do not rely on timer values.

Examples:

- >STEP Execute the instruction at the current PC address value.
- >STEP 2 Execute two instructions, starting at the current PC address value.

STEPFOR

Step Forever

The STEPFOR command begins continuous instruction execution, beginning at the current program counter (PC) address value. Execution stops when a key is pressed.

Syntax:

STEPFOR

NOTE: Do not use any step command (ST, STEP, STEPFOR, STEPTIL, or T) if the PC points to internal RAM (for instance, option RAM) or EEPROM or if the code branches into internal RAM or EEPROM.

The step commands are not real-time. They execute one instruction at a time, then return control to the monitor. Do not rely on timer values.

Example:

>STEPFOR Execute instructions continuously until the user presses a key.

MMDS0508OM/D

STEPTIL

Single Step to Address

STEPTIL

The STEPTIL command continuously executes instructions from the current program counter (PC) address value until the PC reaches the specified address.

Syntax:

STEPTIL <address>

Where:

<address> The address at which instruction execution stops; this location must be an instruction address.

NOTE: Do not use any step command (ST, STEP, STEPFOR, STEPTIL, or T) if the PC points to internal RAM or EEPROM or if the code branches into internal RAM or EEPROM.

The step commands are not real-time. They execute one instruction at a time, then return control to the monitor. Do not rely on timer values.

Example:

>STEPTIL 0400

Execute instructions continuously until the PC value is 0400 during an opcode fetch cycle.

STOP	Stop Program Execution	STOP

The STOP command stops user program execution and updates the debug screens with current data.

Syntax:

STOP

Example:

>STOP Stop program execution and update the debug screen.

MMDS0508OM/D
SXB		Set Multiplexer SXB		
		The SXB command sets the analyzer to capture either a 16-bit timetag counter and the eight pod B logic clips or a 24-bit timetag counter. The default is to use the 16-bit timetag and pod B.		it timetag nter. The
	NOTE:	When using the	logic clip cables, always attach the black clip	to ground.
		Syntax:		
			SXB CLIPS TAGS	
		Where:		
		CLIPS	Directs the analyzer to capture the pod B log clips with 16-bit timetag counter.	ic
		TAGS	Directs the analyzer to capture a 24-bit timet counter.	ag

Example:

>SXB TAGS Select extended time tag bits.

Command-Line Commands

SYSINFO

System Information



The SYSINFO command calls to DOS for the amount of memory available, then displays this information in the debug F10 window.

Syntax:

SYSINFO

Example:

>SYSINFO Show system information.

Total memory available: 187488

Largest free block: 187488

MMDS0508OM/D

MOTOROLA

Command-Line Commands Command Explanations

Single Step (Trace)

The T command executes a specified *hexadecimal* number of instructions beginning at the current program counter (PC) address value. If a number is not specified, this command executes one instruction. The T, ST, and STEP commands are identical.

Syntax:

T [<count>]

Where:

- <count> The hexadecimal number of instructions to be executed. Hexadecimal \$7FF is the maximum value.
- **NOTE:** Do not use any step command (ST, STEP, STEPFOR, STEPTIL, or T) if the PC points to internal RAM (for instance, option RAM) or EEPROM or if the code branches into internal RAM or EEPROM.

The step commands are not real-time. They execute one instruction at a time, then return control to the monitor. Do not rely on timer values.

Examples:

- >T Execute the instruction at the current PC address value.
- >T 4 Execute four instructions beginning at the current PC address value.

MMDS0508OM/D

Go to: www.freescale.com

Command-Line Commands

TIMETAG

The TIMETAG command selects the source and frequency for the analyzer time tag clock. Entering this command with no parameter values brings up the time tag window, from which you can select a frequency or a source. If you select a frequency, the system uses an internal source of the frequency chosen. If you select a source, the system prompts for an appropriate frequency value.

If you select the external source, connect logic clip TT_OSC (white) of the pod B cable to the external clock source. (The pod B connector is the closest to the front of the station module.)

NOTE: When using the logic clip cables, always attach the black clip to ground.

Syntax:

TIMETAG [[<source>] [<rate>]]

Where:

 Internal (MMDS platform board), programmable, external or emulation module. With no source specified, the internal source is understood.

To specify other possible clock sources, use the following:

- 2. EM Use the bus clock of the MCU being emulated
- 3. PR Use a programmable clock in the range of 50 to 50,000 Hz
- 4. EX Use an external clock provided through the TT_OSC logic clip (white) of pod B

Semiconductor, Inc

reescale

Command-Line Commands Command Explanations

TIMETAG	Time Tag Cloc	k Source	TIMETAG
	<rate> The frequency for the time the internal source, the va 8, and 16 as the possible of timetag source requires an and 50,000 Hz. When an e bus clock are used for the value entered is only used displayed in the analyzer</rate>		/hen specifying lz with 1, 2, 4, programmable ue between 50 rce or the MCU ock, the <rate> calculations</rate>
	Examples:		
	>TIMETAG	Display the time tag wind selection of a frequency	dow (for user / or source).
	>TIMETAG 8	Select the 8-MHz time t	ag frequency.
	>TIMETAG PR 120 ຣ໐ເ	Select a 120-Hz progra	mmable
	>TIMETAG EX 32768	Select the external sour host that frequency is 3	ce and notify 2.768 kHz.

V			Set/Clear V Bit
	NOTE:	This comm	and is for the MMDS08 only.
		The V com the specifie	mand sets the V bit in the condition code register (CCR) to ed value.
	NOTE:	The CCR b CCR patter interrupt m designators means that	it designators are at the lower right of the CPU window. The rn is V11HINZC (V is overflow, H is half-carry, I is IRQ ask, N is negative, Z is zero and C is carry). A letter in these s means that the corresponding bit of the CCR is set; a period the corresponding bit is clear.
		Syntax:	
		V 0 1	
		Where:	
		0	Clears the V bit
		1	Sets the V bit
		Example:	
		>V 0	Clears the V bit in the CCR.

MOTOROLA

Freescale Semiconductor, Inc.

VAR

Display Variable



The VAR command displays the specified address and its contents in the variables F8 window. If a map file has been loaded, symbols and labels from the source code can be used as arguments.

As many as 32 variables can be declared in the variables F8 window. The window shows 11 at a time. Using the VAR command establishes such a variable.

(The RTVAR command also establishes variables for display in the variables F8 window, but such variables are not real-time. The 32-variable maximum applies to variables established by both the RTVAR and VAR commands.)

The *<type>* argument enables display of variables in byte, word, or string format. A byte display is hexadecimal and binary, a word display is hexadecimal and decimal, and a string display is ASCII.

For an ASCII string, the optional *<n>* argument specifies the number of characters; the default is the maximum 11 characters. Control and other non-printing characters appear as periods (.).

Syntax:

```
VAR[.<type>] <address>|<symbol> [<n>]
```

Where:

<type></type>	The variable type to display: B (byte, the default), W (word), or S (string)
<address></address>	The address of the memory variable
<n></n>	The number of characters to be displayed. Used only with the string type. If $< n >$ is omitted, 11 ASCII characters will be visible in the window, beginning at the $< address >$ argument location.
<symbol></symbol>	A symbol loaded from a .MAP file

Command-Line Commands

VAR	Dis	splay Variable	VAR
	Examples:		
	>VAR 100	Display (in hexadecimal and bina address 100	ary) the byte at
	>VAR.B 110	Display (in hexadecimal and bina address 110	ary) the byte at
	>VAR.W 102 at	2 Display (in hexadecimal and dec	imal) the word
	>VAR.S 200	address 102 5Display the 5-character ASCII st address 200	ring starting at

Command-Line Commands Command Explanations



Display Version



The VER command displays the version of the host software and of the current personality (.MEM) file. The abbreviated VER is equivalent to the VERSION command.

Syntax:

VER

Example:

>VER Display the version numbers of the host software and the currently loaded personality file.

Command-Line Commands

VERSION

Display Version



The VERSION command displays the version of the host software and of the current personality (.MEM) file. The abbreviated VER form of this command also can be used.

Syntax:

VERSION

Example:

>VERSION

Display the version numbers of the host software and the currently loaded personality file.

VF		,	View File	VF
		allows the user to view any file. If no argume and pops up a file select window.	o argument is	
		Syntax:		
		VF [< <i>filename</i> :	>]	
		Where:		
		<filename></filename>	Any text file	
		Examples:		
		>VF test, log	Displays test.log in view file screen	
		>VF *.asm	Displays the names of the .asm files	
		.		

NOTE: The view file buffer size is determined by the total memory available (see SYSINFO command), if the selected file exceeds memory resources. The entire file will not be viewed.

Command-Line Commands

<u>WAIT</u>

Pause between Commands



The WAIT command causes the command interpreter to pause for a specified *hexadecimal* number of seconds. (The default is five.) This command is useful primarily in script files.

Syntax:

WAIT [<*n*>]

Where:

<n> The *hexadecimal* number of seconds to pause.

Example:

>WAIT A Pause the command interpreter for 10 seconds.

MMDS0508OM/D

MOTOROLA

Command-Line Commands Command Explanations

WAIT4RESET

Wait for Target Reset



The WAIT4RESET command puts the emulation MCU into the reset state until the target system provides a reset signal.

For this command to function properly, enable the state of the MMDS with a reset signal from the target system. (See the explanation of the RESETIN command.) To restore the emulator to the IDLE state, enter the RESET command.

Syntax:

WAIT4RESET

Example:

>WAIT4RESET Wait for reset.

MMDS0508OM/D

Command-Line Commands

Command-Line Commands

WHEREIS

The WHEREIS command displays a symbol or address. If the argument is a symbol, this command displays the symbol's address. If the argument is an address, this command displays the corresponding symbol, if one is assigned. If the symbol is the same as a hexadecimal address, the command shows the hexadecimal address, not the address of the symbol.

Syntax:

WHEREIS <symbol> | <address>

Where:

	<symbol></symbol>	A symb	ool listed in the symbol table
	<address></address>	An add	Iress for which a symbol is desired
Exa	imples:		
	>WHEREIS	START	Display the symbol START and its value.
	>WHEREIS	0100	Display the value 0100 and its symbol, if any.

MMDS0508OM/D

MOTOROLA

Х



Where:

The new value for the X register <n>

Example:

Set the index register value to 05. >X 05

MMDS0508OM/D

For More Information On This Product, Go to: www.freescale.com

Command-Line Commands

XREG	Set X Index Register	XREG
	The XREG command sets the index register (X) to The XREG command is identical to the X comman Syntax:	o the specified value. nd.

XREG <*n*>

Where:

<n> The new value for the X register

Example:

>XREG F0 Set the index register value to F0.

MMDS0508OM/D

MOTOROLA

Set/Clear Z Bit

Ζ

The Z command sets the Z bit in the condition code register (CCR) to the specified value.

NOTE: The CCR bit designators are at the lower right of the CPU window. The CCR pattern is V11HINZC (V is two's complement overflow for M68HC08 MCU only and is 1 for M68HC05 MCU, H is half-carry, I is IRQ interrupt mask, N is negative, Z is zero, V is overflow, and C is carry). A letter in these designators means that the corresponding bit of the CCR is set; a period means that the corresponding bit is clear.

Syntax:

Z 0|1

Where:

- 0 Clears the Z bit
- 1 Sets the Z bit

Example:

>Z 0 Clears the Z bit in the CCR.

Ζ

Command-Line Commands

ZOOM

Resize Source Window



The ZOOM command toggles the size of the source window between normal and enlarged. Another way to resize the source window is to enter the ALT-Z keyboard combination.

Syntax:

ZOOM

Example:

>ZOOM Resize the source window.

S-Record Information

Contents

Introduction
S-Record Content
S-Record Types
S-Record Creation
S-Record Example

Introduction

The Motorola S-record format was devised for the purpose of encoding programs or data files in a printable format for transportation between computer systems. This transportation process can therefore be monitored and the S-records can be easily edited.

S-Record Content

When observed, S-records are essentially character strings made of several fields which identify the record type, record length, memory address, code/data, and checksum. Each byte of binary data is encoded as a two-character hexadecimal number: the first character representing the high-order four bits and the second the low-order four bits of the byte.

Five field which comprise an S-record are shown below:

	TYPE RECORD LENGTH ADDRESS CODE/DATA CHECKSUM
--	---

where the fields are composed as shown in Table 15.

Field	Printable Character s	Contents
Туре	2	S-record type — S0, S1, etc.
Record Length	2	Character pair count in the record, excluding the type and record length.
Address	4, 6, or 8	2-, 3-, or 4-byte address at which the data field is to be loaded into memory.
Code/Data	0–2n	From 0 to n bytes of executable code, memory loadable data, or descriptive information. For compatibility with teletypewriter, some programs may limit the number of bytes to as few as 28 (56 printable characters in the S-record).
Checksum	2	Least significant byte of the one's complement of the sum of the values represented by the pairs of characters making up the record length, address, and the code/data fields.

Table 15. S-Record Field Description

Each record may be terminated with a CR/LF/NULL. Additionally, an S-record may have an initial field to accommodate other data such as line numbers generated by some time-sharing system.

Accuracy of transmission is ensured by the record length (byte count) and checksum fields.

S-Record Types

Eight types of S-records have been defined to accommodate the several needs of the encoding, transportation, and decoding functions. The various Motorola upload, download, and other record transportation control programs, as well as cross assemblers, linkers, and other file-creating or debugging programs, utilize only those S-records which serve the purpose of the program. For specific information on which S-records are supported by a particular program, the user manual for that program must be consulted.

NOTE: The MMDS supports only the S0, S1, and S9 record types. All data before the first S1 record is ignored. Thereafter, all records must be S1 type until the S9 record, which terminates data transfer.

An S-record format may contain the following record types:

- S0 Header record for each block of S-records. The code/data field may contain any descriptive information identifying the following block of S-records. The address field is normally zeroes.
- S1 Code/data record and the two-byte address at which the code/data is to reside.
- S2–S8 Not applicable to MMDS.
- S9 Termination record for a block of S1 records. Address field may optionally contain the two-byte address of the instruction to which control is to be passed. If not specified, the first interplant specification encountered in the input will be used. There is no code/data field.

Only one termination record is used for each block of s-records. Normally, only one header record is used, although it is possible for multiple header records to occur.

S-Record Creation

S-record format programs may be produced by dump utilities, debuggers, cross assemblers, or cross linkers. Several programs are available for downloading a file in S-record format from a host system to an 8-bit or 16-bit microprocessor-based system.

S-Record Example

Shown here is a typical S-record format, as printed or displayed:

S00600004844521B S1130000285F245F2212226A000424290008237C2A S11300100002000800082529001853812341001813 S113002041E900084E42234300182342000824A952 S107003000144ED492 S9030000FC

The above format consists of an S0 header record, four S1 code/data records, and an S9 termination record.

The S0 header record is described in Table 16.

Field	S-Record Entry	Description
Туре	S0	S-record type S0, indicating a header record.
Record Length	06	Hexadecimal 06 (decimal 6), indicating six character pairs (or ASCII bytes) follow.
Address	0000	Four-character two-byte address field, zeroes.
Code/Data	48 44 52	Descriptive information identifies the following S1 records: ASCII H, D, and R — "HDR"
Checksum	18	Checksum of S0 record.

Table 16. S0 Record Description

The first S1 record is explained in Table 17.

Field	S-Record Entry	Description
Туре	S1	S-record type S1, indicating a code/data record to be loaded/verified at a two-byte address.
Record Length	13	Hexadecimal 13 (decimal 19), indicating 19 character pairs, representing 19 bytes of binary data, follow.
Address	0000	Four-character two-byte address field; hexadecimal address 0000, indicates location where the following data is to be loaded.
Code/	Opcode	Instruction
Data	285F 245F 2212 226A 000424 2900 08237	BHCC\$0161 BCC\$0163 BHI\$0118 BHI\$0172 BRSET0, \$04, \$012F BHCS\$010D BRSET4, \$23, \$018C
Checksu m	2A	Checksum of the first S1 record.

Table 17. S1 Record Description

The 16 character pairs shown in the code/data field of **Table 17** are the ASCII bytes of the actual program.

The second and third S1 code/data records each also contain \$13 (19) character pairs and are ended with checksum 13 and 52, respectively. The fourth S1 code/data record contains 07 character pairs and has a checksum of 92.

S-Record Information

The S9 termination record is explained in Table 18.

Field	S-Record Entry	Description
Туре	S9	S-record type S9, indicating a termination record.
Record Length	03	Hexadecimal 03, indicating three character pairs (three bytes) follow.
Address	0000	Four-character two-byte address field, zeroes.
Code/Data		There is no code/data in a S9 record.
Checksum	FC	Checksum of S9 record.

Table 18. S9 Record Description

Each printable ASCII character in an S-record is encoded in binary. **Table 19** gives an example of encoding for the S1 record. The binary data is transmitted during a download of an S-record from a host system to a 8- or 16-bit microprocessor-based system.

Table 19.	Example of	f S-Record	Encoding
-----------	------------	------------	----------

	ΤY	PE			LEN	GTH			ADDRESS CODE/DATA												CHECKSUM							
\$	3		1		1	3	3	C)	(0		0		2		8		ţ	5	F	=		2	2	А		
5	3	3	1	3	1	3	3	3	0	3	0	3	0	3	3 0		32		8	3 5		4	6		3	2	4	1
0101	0011	0011	0001	0011	0001	0011	0011	0011	0000	0011	0000	0011	0000	0011	0000	0011	0010	0011	1000	0011	0101	0100	0110		0011	0010	0100	0001

MMDS0508OM/D

MOTOROLA

Index

Α

A,
ACC
Arguments, Command-Line
Commands
ARM,108
ASM

В

BAUD61, 110
Baud Rate61
BAUDCHK61, 111
BELL
BF
BR114
BSAMODE115
BSATT116
Bus State Analyzer77
Collecting Bus Data87
Defining Events79
Searching the Trace Buffer95
Selecting Options
Selecting the Trigger Mode
Using the Time-Tag Clock96
Viewing Data88

С

C 117
Cables, Connecting
Host Computer26

Power .27 Target .27 CCR .118 CHIPINFO .119 CLEARMAP .120	7 7 3 9 0
COLORS121	1
Colors, Changing Screen58, 70, 121	1
Command Lines	
Α	3
ACC	7
ARM	3
ASM64, 109	9
BAUD)
BAUDCHK	1
BELL	2
BF	3
BR	4
BSAMODE	5
BSATT	5
C	7
CCR 118	3
CHIPINEO 68 119	۔ م
CI FARMAP 120))
COLORS 58 70 121	1
Commands 102	>
DARM 122	-
DASM 64 122	- 2
ENDRSA 120	ר 1
ENDBSA	+
EVAL)
) 7
	1
GETBSA128	3

GO57, 73, 129
GOTIL
Н
HELP
HOMEBSA
HREG
HX
I
INFO
LF
LOAD
LOADMAP
LOADMEM
LOADTRIGGERS142
MD
MM65, 144, 145
N
NEXTA
NEXTB
NEXTC
NEXTD
NEXTE
NOBR
OSC
PC
QUIT
REG
REM
RESET
RESETGO
RESETIN
RESETOUT
RTMEM
RTVAR
SCREENBSA
SCRIPT
SETMEM
SHELL

SHOWBSA
SHOWMEM
SHOWTRIGGER172
SNAPSHOT
SOURCE
ST
STACK
STEP
STEPFOR
STEPTIL
STOP
Summary (Table)
SXB
Syntax
SYSINFO
Т73, 183
TIMETAG
V
VAR
VER
VERSION
VF
WAIT
WAIT4RESET
WHEREIS
X
XREG
Ζ197
ZOOM
Command Types
BSA
Debug71
Initialization60
System
Command Types, Bus State Analyzer77
Connector, Cable
Pin Assignments
Signal Descriptions

D

DARM	 																						12	22
DASM	 	•	•	÷	•	ł	ł	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	12	23

Ε

EM
Installing25
Removing
ENDBSA
EVAL
EXIT

F

Fuse Replacement	32
------------------	----

G

G	127
GETBSA	128
GO	129
GOTIL	130

Н

Н
Hardware Installation
Configuring the Platform Board 22
Connecting Cables26
Fuse Replacement32
Installing the EM25
Introduction20
Pin Assignments, Connector28
Removing the EM25

Reset Switch.28Signal Descriptions, Connector.28HELP.132HOMEBSA.133Host Computer.16Requirements.16HREG.134HX.135

I

Ι	
INFO	
Initialization and Loading	
Clock Speed	
Memory	
Initialization Commands .	
Introduction	

J

Jumper Headers	
Factory Test (J1)	
Port Voltage Control (J2–J4)	

Κ

Key Commands	
Debug Screen Windows	
Main Windows	
Pop-Up Windows	
Source/Code F2 Window	

L

LF	
LOAD	
Loading and Initialization	
LOADMAP	

Index

LOADMEM		 				. 141
LOADTRIGGERS		 				.142

Μ

MMDS0508
Manual
Organization12
MD
Memory
Mapping61, 62
MM
MMDS
Introduction11
MMDS05
Debug Screen
Running
MMDS08
Debug Screen
HREG134
HX
Introduction11
Running
Mouse Operation56

Ν

N	6
NEXTA	7
NEXTB	8
NEXTC	9
NEXTD	0
NEXTE	1
NOBR	2

0

	OSC																		÷											15	53	3
--	-----	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	---	--	--	--	--	--	--	--	--	--	--	----	----	---

Ρ

PC	154
Pin Assignments, Connector	. 28
Platform Board, Configuration	. 22
Pod	. 31
Port Voltage Control	
Jumper Headers (J2–J4)	.24

Q

QUIT .															1	55	5

R

REG	 	 	 156
REM	 	 	 157
RESET	 	 	 158
RESETGO	 	 	 159
RESETIN	 	 	 160
RESETOUT	 	 	 161
RTMEM	 	 	 162
RTVAR	 	 	 163

S

SCREENBSA
Screens
Baud Window54
CPU Window
Debug F10 Window50
Emulator Clock Frequency Window54
Emulator Clock Frequency
Window MMDS0554, 153
Emulator Clock Frequency
Window MMDS0855, 153
Introduction
Memory F3 Window50
MMDS05 Debug Screen43

MMDS08 Debug Scree	n
Set Memory Window	
Source/Code F2 Windo	w
Stack Window	
Status Area	
User	
Variables F8 Window .	
SCRIPT	
Script Files	
STARTUP.05	
STARTUP.08	
Serial	
SETMEM	
SHELL	
SHOWBSA	
SHOWMEM	
SHOWTRIGGER	
SNAPSHOT	
Software	
Distribution Format	
Installation	
Personality Files	
Target, Loading	63
Using	
SOURCE	
ST	
STACK	
STARTUP.05 (Script File)	60, 66
STARTUP.08 (Script File)	
STEP	
STEPFOR	
STOP	
SXB	

SYSINFO	 	182
System		
Commands	 	66
Components	 	15
Connections	 	

Τ

Т	 							ł	ł	.183
TIMETAG.	 							ł	ł	.184

V

V	86
VAR	88
VER	89
VERSION1	90
VF1	91

W

WAIT	 	 	 		 .192
WAIT4RESET	 	 	 		 .193
WHEREIS	 	 	 		 .194
Windows Operation	 	 	 		 37

Х

Χ	 	 	 							.195
XREG .	 	 	 			•	.13	4,	135,	, 1 <mark>96</mark>

Ζ

Ζ					ļ								ļ		19	97	
ZOOM															19	98	•

Index

MMDS0508OM/D

MOTOROLA

Motorola reserves the right to make changes without further notice to any products herein. Motorola makes no warranty, representation or guarantee regarding the suitability of its products for any particular purpose, nor does Motorola assume any liability arising out of the application or use of any product or circuit, and specifically disclaims any and all liability, including without limitation consequential or incidental damages. "Typical" parameters which may be provided in Motorola data sheets and/or specifications can and do vary in different applications and actual performance may vary over time. All operating parameters, including "Typicals" must be validated for each customer application by customer's technical experts. Motorola does not convey any license under its patent rights nor the rights of others. Motorola products are not designed, intended, or authorized for use as components in systems intended for surgical implant into the body, or other applications intended to support or sustain life, or for any other application in which the failure of the Motorola product could create a situation where personal injury or death may occur. Should Buyer purchase or use Motorola products for any such unintended or unauthorized application, Buyer shall indemnify and hold Motorola and its officers, and reasonable attorney fees arising out of, directly or indirectly, any claim of personal injury or death associated with such unintended or unauthorized use, even if such claim alleges that Motorola was negligent regarding the design or manufacture of the part. Motorola and () are registered trademarks of Motorola, Inc. is an Equal Opportunity/Affirmative Action Employer.

How to reach us:

USA/EUROPE/Locations Not Listed: Motorola Literature Distribution; P.O. Box 20912; Phoenix, Arizona 85036.1-800-441-2447 or 602-303-5454

MFAX: RMFAX0@email.sps.mot.com - TOUCHTONE 602-244-6609

INTERNET: http://Design-NET.com

JAPAN: Nippon Motorola Ltd.; Tatsumi-SPD-JLDC, 6F Seibu-Butsuryu-Center, 3-14-2 Tatsumi Koto-Ku, Tokyo 135, Japan. 03-81-3521-8315

ASIA/PACIFIC: Motorola Semiconductors H.K. Ltd.; 8B Tai Ping Industrial Park, 51 Ting Kok Road, Tai Po, N.T., Hong Kong. 852-26629298

